

SINGER

400W15

LIST OF PARTS



MACHINE No. 400w15

THE SINGER MANUFACTURING COMPANY

INDEX

| | PAGE |
|-------------------------|---------|
| ACCESSORIES | 13 |
| BELT GUARD | 19 |
| BINDERS | 15 |
| BOBBIN HOLDER | 18 |
| BOBBIN WINDERS | 14 & 18 |
| CORDER | 19 |
| FINGER GUARD | 20 |
| FITTINGS | 29 |
| GUIDE | 20 |
| HEMMERS | 20 |
| KNEE LIFTER | 13 |
| MACHINE NO. 400w15 | 5 |
| MISCELLANEOUS PARTS | 25 |
| NUMERICAL LIST OF PARTS | 37 |
| PIPING ATTACHMENT | 22 |
| PRESSER FEET | 22 |
| PULLER FEED | 26 |
| THREAD UNWINDER | 27 |
| TUCKER | 27 |
| WOOD BASE | 29 |

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine Part is the number of the Single Part only, except when the part includes Set Screws, Clamping Screws, Studs and Rollers Spun on, Small Wires riveted, or Parts soldered together, etc., which it is necessary to furnish in combination.

Every combination of parts sent out has its specific number which, although not stamped on Parts (except in above case), must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever Machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished, Nickel Plated and Buffed.
- B. Polished, Nickel Plated and Buffed.
- C. Hardened only.
- D. Polished only.
- E. Soft, not polished.
- F. Hardened and Polished.
- H. Blued.
- J. Nickel Plated only.
- R. Merlized.
- X. Black Oxide, for Iron and Steel.
- XC. Hardened and Black Oxide, for Iron or Steel.
- Y. Black Nickel Plated only.

These letters MUST BE USED when they appear in the list and AFTER the number, as in the list.

In this series

1 to 1500, 200001 to 201500 and 350001 to 351500 are Screw Numbers.
1501 to 1800, 201501 to 201800 and 351501 to 351800 are Nut Numbers.
1801 to 2000, 201801 to 202000 and 351801 to 352000 are Roller Numbers.
2001 to 50000 and 202001 to 350000 are Numbers of Machine Parts.


The figures in the second column refer only to the plate in which the illustration of the part is shown and are NOT TO BE USED in ordering.

Two or more numbers over a cut indicate that the difference between such parts is not visible in an illustration.

Parts marked with an asterisk (*) are furnished only when repairs are made at the factory.

LIST OF PARTS COMPLETE

FOR

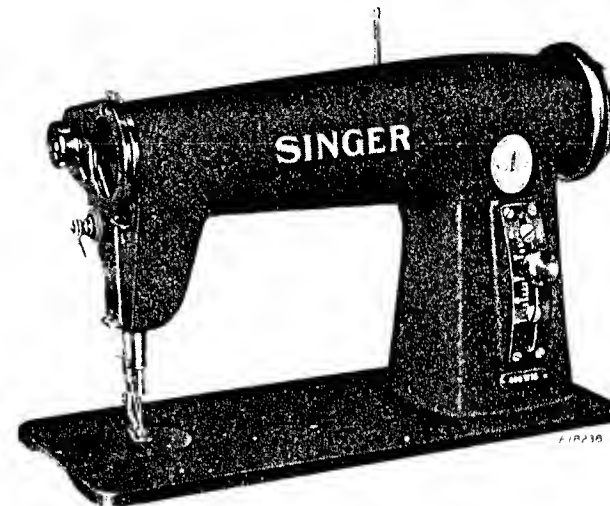

MACHINE No. 400w15

HIGH SPEED

DOUBLE ROTARY DISC TAKE-UP.

SINGLE NEEDLE. LOCK STITCH. DROP FEED.

ONE HAND STITCH REGULATOR.

FOR STITCHING LIGHT AND MEDIUM WEIGHT FABRICS

| No. | Plate | Name |
|---------|-------|--|
| *270801 | ----- | Arm |
| 270002 | 18381 | " Cover Plate (back) |
| 200041X | 18381 | " " " Screw (2) |
| 204235 | 18381 | " Position Pin (2) |
| 350390E | 18381 | " Screw (long) |
| 200004E | 18381 | " " (short) (2) |
| 202005 | 18381 | " " Washer (3) |
| *270084 | 18371 | " Shaft |
| 270177 | 18371 | " " 270084 with 200333C, 200378C, 270005 and 270099 |
| 270004 | 18371 | Arm Shaft Ball Bearing (back) |
| 270005 | 18371 | " " " (front) |
| 270167 | 18371 | " " Connection Belt |
| 270168 | 18371 | " " " Pulley and Rotary Take-up Driving Pulley with 200363AL, 350492C and three 214206 |
| 350492C | 18371 | Arm Shaft Connection Belt Pulley Position Screw |

| No. | Plate | Name |
|--|-------|---|
| 200363AL | 18371 | Arm Shaft Connection Belt Pulley Set Screw |
| 214206 | 18371 | Arm Shaft Connection Belt Pulley Spring Flange |
| 270189 | 18371 | Balance Wheel (aluminum alloy casting) for 5/16" round belt (diam. of belt groove 1-13/16 in.) (rim diam. 4 in.) with 201346AL and 350107AL |
| 270190 | 18371 | Balance Wheel 270189 with 270004 |
| 270187 | 18371 | " " (aluminum alloy casting) for "V" belt (outside diam. of belt groove 2.9 in.) (rim diam. 4 in.) with 201346AL and 350107AL |
| 270188 | 18371 | Balance Wheel 270187 with 270004 |
| Note: Balance Wheel 270188 is furnished with this machine unless otherwise specified on order. | | |
| 350107AL | 18371 | Balance Wheel Position Screw |
| 201346AL | 18371 | " " Set Screw |
| *270802 | ----- | Bed |
| 270009 | 18381 | " Slide |
| 270144 | 18380 | Face Plate |
| 350503H | 18380 | " " Screw (5) |
| 143030 | 18383 | Feed Bar |
| 270012 | 18383 | " " Center (2) |
| 200394C | 18383 | " " Set Screw |
| 235706 | 18383 | " " Oiling Wick |
| 270138 | 18383 | " " " " Holder |
| 270139 | 18383 | " " " " 270138 with 235706 |
| 52266 | 18383 | Feed Bar Slide Block |
| 52267 | 18383 | " " " " 52266 with 125060 |
| *125060 | 18383 | " " " " Stud |
| 52031 | 18364 | " Dog, 19 teeth (22 teeth to the inch) |
| 50117E | 18364 | Feed Dog Screw (2) |
| 270805 | 18383 | " Driving Connection |
| 270804 | 18383 | " " " 270803 with 270016 |
| 270805 | 18383 | Feed Driving Connection Crank with 200040E |
| 270806 | 18383 | Feed Driving Connection Crank 270805 with 270653 |
| 350507C | 18383 | Feed Driving Connection Crank Hinge Screw |
| 201531E | 18383 | Feed Driving Connection Crank Hinge Screw Nut |
| 270653 | 18383 | Feed Driving Connection Crank Needle Bearing |
| 200040E | 18383 | Feed Driving Connection Crank Pinch Screw |
| 270807 | 18383 | Feed Driving Connection Link |
| 270808 | 18383 | " " " " Hinge Pin |
| 200394C | 18383 | " " " " Set Screw |
| 270016 | 18383 | Feed Driving Connection Needle Bearing |

| No. | Plate | Name |
|----------|-------|--|
| 270809 | 18382 | Feed Driving Eccentric with 200382C and 201220C |
| 201220C | 18382 | Feed Driving Eccentric Position Screw |
| 200382C | 18382 | " " " " Set Screw |
| 270021 | 18383 | " " Rock Shaft with two 200394C |
| 270027 | 18383 | Feed Driving Rock Shaft Center (2) |
| 350277C | 18383 | " " " " " Set Screw (2) |
| 270827 | 18383 | Feed Lifting Connection |
| 270828 | 18383 | " " " " 270827 with 270016 |
| 270015 | 18383 | Feed Lifting Connection Crank with 200040E |
| 200040E | 18383 | Feed Lifting Connection Crank Pinch Screw |
| 200545C | 18383 | Feed Lifting Connection Hinge Screw |
| 201522E | 18383 | " " " " " Nut |
| 270016 | 18383 | " " " " Needle Bearing |
| 270023 | 18382 | " " Eccentric with 200382C and 201220C |
| 201220C | 18382 | Feed Lifting Eccentric Position Screw |
| 200382C | 18382 | " " " " Set Screw |
| 270024 | 18383 | " " Rock Shaft with 52267 |
| 270027 | 18383 | " " " " Center (2) |
| 350277C | 18383 | " " " " " Set Screw (2) |
| 270045 | 18306 | Knee Lifter Lifting Link |
| 270285 | 18381 | " " " " " Connection |
| 200427C | 18381 | " " " " " " Set Screw |
| 200283C | 18306 | Knee Lifter Lifting Link Hinge Screw |
| 270034 | 18381 | " " " " Rod |
| 270048 | 18381 | " " " " " Connection |
| 200434C | 18381 | " " " " " " Set Screw |
| 270049 | 18381 | Knee Lifter Rock Shaft with 200427C and 200434C |
| 270050 | 18306 | Needle Bar with 350445F |
| 270124 | 18306 | " " Bushing (lower) |
| 270261 | 18306 | " " " " (upper) |
| 350439AL | 18306 | " " " " Set Screw |
| 270053 | 18306 | " " Connecting Link |
| 270054 | 18306 | " " " " 270053 with 270043 |
| 270055 | 18306 | Needle Bar Connecting Link Guide Block |
| 200054E | 18306 | " " " " " " " " Screw (2) |
| 270143 | 18306 | Needle Bar Connecting Link Hinge Stud with 222598 and 270161 |
| 222598 | 18306 | Needle Bar Connecting Link Hinge Stud Oil Packing (wick) |
| 200374C | 18371 | Needle Bar Connecting Link Hinge Stud Set Screw |
| 270043 | 18306 | Needle Bar Connecting Link Needle Bearing |

| No. | Plate | Name |
|----------|-------|---|
| 270100 | 18306 | Needle Bar Connecting Link Thrust Washer |
| 270057 | 18306 | Needle Bar Connecting Stud with 200086C and 202330 |
| 202330 | 18306 | Needle Bar Connecting Stud Oil Packing (wick) |
| 200086C | 18306 | Needle Bar Connecting Stud Pinch Screw |
| *270099 | 18371 | " " Crank with 200374C |
| 200333C | 18371 | " " " Position Screw |
| 200378C | 18371 | " " " " Check Screw |
| 270058 | 18306 | Needle Bar Oiling Felt |
| 350445F | 18306 | " Set Screw |
| 270059 | 18306 | Presser Bar with 176J |
| 270060 | 18306 | " " Bushing |
| 270061 | 18306 | " " Lifter |
| 350442C | 18306 | " " " Hinge Screw |
| 270062 | 18306 | " " Lifting Releasing Lever Bracket |
| 270095 | 18306 | Presser Bar Lifting Releasing Lever Bracket Spring |
| 270063 | 18306 | Presser Bar Position Guide with 200196E and 350411C |
| 350411C | 18306 | Presser Bar Position Guide Pinch Screw |
| 270064 | 18381 | " " Spring |
| 350435C | 18381 | " " " Screw (pressure regulating) |
| 350499XC | 18381 | Presser Bar Spring Screw Stud |
| 62527 | 18364 | " Foot Hinge Pin |
| 62925 | 18364 | " " Plate |
| 62926 | 18364 | " " Shank |
| 26231 | 18364 | " " Spring |
| 62927 | 18364 | Presser Foot (spring hinged) complete, Nos. 26231, 62527, 62925 and 62926 |
| 176J | 18306 | Presser Foot Screw |
| 270826 | 18380 | Rotary Take-up (large) |
| 270161 | 18306 | " " " Position Pin |
| 401D | 18380 | " " " Screw (2) |
| 271032 | 18380 | " " " Thread Guide |
| 270906 | 18378 | " " (small) with 270147 and 350418C |
| 270068 | 18378 | Rotary Take-up (small) Driving Shaft |
| 270032 | 18378 | " " " " " " |
| 270069 | 18378 | Ball Bearing (2) |
| 270072 | 18378 | Rotary Take-up (small) Driving Shaft Connection Belt |
| 200382C | 18378 | Rotary Take-up (small) Driving Shaft Pulley with two 200382C |
| 350418C | 18378 | Rotary Take-up (small) Driving Shaft Pulley Set Screw |
| 270147 | 18378 | Rotary Take-up (small) Set Screw |
| 270148 | 18380 | " " " " Thread Cast-off Pin |
| | | Rotary Take-up Guard |

| No. | Plate | Name |
|---------|-------|--|
| 350503H | 18380 | Rotary Take-up Guard Screw (5) |
| 270868 | 18379 | Rotating Hook with 143301 and two 1253AL |
| 270869 | 18379 | Rotating Hook 270868 with 270874 and four 1053E |
| 270870 | 18379 | Rotating Hook 270869 with 270874, 270876 and three 1367E |
| 270871 | 18379 | Rotating Hook 270870 with 59237 |
| 270910 | 18379 | " " Bobbin |
| 52235 | 18379 | " " Case |
| 52236 | 18379 | " " " 52235 with 591F, 1380E and 40394 |
| 40393 | 18379 | Rotating Hook Bobbin Case Hinge Nos. 2974, 40392 and 125320 |
| 270872 | 18379 | Rotating Hook Bobbin Case Holder (chromium plated) |
| 52018 | 18379 | Rotating Hook Bobbin Case Holder Position Bracket |
| 200977D | 18379 | Rotating Hook Bobbin Case Holder Position Bracket Screw |
| 40392 | 18379 | Rotating Hook Bobbin Case Latch |
| 125320 | 18379 | " " " " " " Lever |
| 2974 | 18379 | " " " " " " " |
| | | Fulcrum Pin |
| 2975 | 18379 | Rotating Hook Bobbin Case Latch Spring |
| 592E | 18379 | " " " " " Stop Screw |
| 40394 | 18379 | Rotating Hook Bobbin Case Tension Spring |
| 591F | 18379 | Rotating Hook Bobbin Case Tension Spring Regulating Screw |
| 1380E | 18379 | Rotating Hook Bobbin Case Tension Spring Screw |
| 52237 | 18379 | Rotating Hook Bobbin Case complete, Nos. 592E, 2975, 40393 and 52236 |
| 270873 | 18379 | Rotating Hook Bobbin Case 52237 with 270872 |
| 270813 | 18382 | Rotating Hook Driving Shaft |
| 270032 | 18382 | " " " " " Ball Bearing |
| 271062 | 18382 | Rotating Hook Driving Shaft Bushing with 222598 |
| 222598 | 18382 | Rotating Hook Driving Shaft Bushing Oil Packing (wick) |
| 200362C | 18382 | Rotating Hook Driving Shaft Bushing Set Screw |
| 270169 | 18382 | Rotating Hook Driving Shaft Connection Belt Pulley with 214206 and two 200070C |
| 200070C | 18382 | Rotating Hook Driving Shaft Connection Belt Pulley Set Screw |
| 214206 | 18382 | Rotating Hook Driving Shaft Connection Belt Pulley Spring Flange |
| 270035 | 18382 | Rotating Hook Driving Shaft Gear (internal teeth) with 200382C and 201220C |

| No. | Plate | Name |
|---------|-------|--|
| 201220C | 18382 | Rotating Hook Driving Shaft Gear Position Screw |
| 200382C | 18382 | Rotating Hook Driving Shaft Gear Set Screw |
| 270036 | 18382 | Rotating Hook Driving Shaft Oil Lead Wire |
| 270038 | 18381 | Rotating Hook Oil Reservoir Cover |
| 270039 | 18381 | " " " " " |
| | | Gasket |
| 200041X | 18381 | Rotating Hook Oil Reservoir Cover Screw (6) |
| 270155 | 18382 | Rotating Hook Oil Reservoir Oil Gauge |
| 143301 | 18379 | " " " Wick (felt) |
| 270876 | 18379 | " " " Section |
| 1367E | 18379 | " " " Screw |
| 1253AL | 18379 | " " " Set Screw |
| 270162 | 18382 | " " " Shaft |
| 270163 | 18382 | " " " Bushing |
| 268258 | 18382 | " " " " Oil Packing (wick) |
| 350277C | 18382 | Rotating Hook Shaft Bushing Set Screw |
| 270164 | 18382 | " " " " End Bearing |
| 201215D | 18382 | " " " " " Screw (?) |
| 202423 | 18382 | " " " " Oil Filter Wick |
| 143349 | 18382 | " " " " " " |
| | | Holder |
| 270176 | 18382 | Rotating Hook Shaft Oil Filter complete, Nos. 143349 and 202423 |
| 350498E | 18382 | Rotating Hook Shaft Oil Regulating Screw |
| 270044 | 18382 | Rotating Hook Shaft Thrust Washer |
| 270166 | 18382 | Rotating Hook Shaft Bushing complete, Nos. 268258, 270044, 270162 to 270164, 270176, 350498E and two 201215D |
| 270874 | 18379 | Rotating Hook Thread Guard |
| 1053E | 18379 | " " " " " Screw |
| 202248 | 18383 | Stitch Regulating Adjusting Screw Washer |
| 270815 | 18383 | Stitch Regulating Adjusting Screw Washer (leather) |
| 350508X | 18383 | Stitch Regulating Adjusting Thumb Screw |
| 270816 | 18383 | Stitch Regulating Index Plate |
| 270829 | 18383 | " " " " " 270816 with two each 200996C and 270819 |
| 691F | 18383 | Stitch Regulating Index Plate Screw (4) |
| 270317 | 18383 | Stitch Regulating Lever |
| 270818 | 18383 | " " " " " Connection |
| 350509C | 18383 | " " " " " " |
| | | Hinge Screw (2) |
| 201520H | 18383 | Stitch Regulating Lever Connection Hinge Screw Nut (2) |
| 204020 | 18383 | Stitch Regulating Lever Cushion (leather) |

| No. | Plate | Name |
|----------|-------|---|
| 200350H | 18383 | Stitch Regulating Lever Hinge Screw |
| 270819 | 18383 | " " " " Stop Block with 204020 |
| 200996C | 18383 | Stitch Regulating Lever Stop Block Screw |
| 270820 | 18383 | Stitch Regulating Shaft |
| 270821 | 18383 | " " " " Bushing (split) |
| 200043C | 18383 | Stitch Regulating Shaft Bushing Set Screw |
| 201524E | 18383 | Stitch Regulating Shaft Bushing Set Screw Nut |
| 270822 | 18383 | Stitch Regulating Shaft Crank with 200040E |
| 270823 | 18383 | Stitch Regulating Shaft Crank 270822 with two 270853 |
| 270825 | 18383 | Stitch Regulating Shaft Crank Hinge Stud |
| 200394C | 18383 | Stitch Regulating Shaft Crank Hinge Stud Set Screw |
| 270824 | 18383 | Stitch Regulating Shaft Crank Link with two 200394C |
| 270653 | 18383 | Stitch Regulating Shaft Crank Needle Bearing |
| 200040E | 18383 | Stitch Regulating Shaft Crank Pinch Screw |
| 2102 | 18380 | Tension Disc |
| 270076 | 18306 | " " Releaser (adjustable) |
| 200132E | 18306 | " " " Screw |
| 32572 | 18380 | " " Releasing Disc |
| 270086 | 18380 | " " " Pin |
| 13710 | 18380 | " " Spring |
| 50304C | 18380 | " " Stud |
| 52098 | 18380 | " " " 50304C with 1560C |
| 50305C | 18380 | " " " Set Screw |
| 1560C | 18380 | " " Thumb Nut |
| 270087 | 18380 | Tension complete, Nos. 13710, 32572, 52082, 52083, 52098, 270086 and two 2102 |
| 270096 | 18380 | Thread Guide |
| 236245 | 18380 | " " " (lower) |
| 270077 | 18306 | " " " (on needle bar bushing) |
| 350503H | 18380 | " " " Screw (2) |
| 270079 | 18306 | " " Pull-off |
| 200196E | 18306 | " " " Set Screw |
| 270080 | 18380 | " " Retainer |
| 200355H | 18380 | " " " Set Screw |
| 270150 | 18380 | " " Severing Finger |
| 270151 | 18380 | " " " " Guard |
| 350486XC | 18380 | " " " " " Hinge Screw |
| 270156 | 18380 | " " " " " " " |
| | | Spring Washer |
| 200567H | 18380 | Thread Severing Finger Screw |
| 52082 | 18380 | " " Take-up Spring |
| 52083 | 18380 | " " " " Regulator with 50305C |

| No. | Plate | Name |
|----------|-------|---|
| 446C | 18380 | Thread Take-up Spring Regulator Set Screw |
| 143272XC | 18364 | Throat Plate (medium needle hole) |
| 691F | 18364 | " " Screw (2) |

ACCESSORIES

| No. | Plate | Name |
|--------|-------|--|
| 50190W | 1 381 | Attachment Thumb Screw |
| 2587B | 1 310 | Guide |
| 270010 | 1 379 | Rotating Hook Bobbin (2) |
| 250522 | 1 310 | Screw Driver (for needle set screw) |
| 88 x 1 | - - - | Needles, six, size 16 |
| 228373 | 1 311 | Drip Pan, with four 3/4 in. wire nails |
| 12361 | 1 310 | Machine Hinge Connection (2) |
| 41400 | 1 310 | Machine Rest Pin (wood) |
| 120342 | 1 310 | Oiler (copper plated) with 120343 |
| 120343 | 1 310 | " Spout (3-1/2 in. long) |
| 259477 | 1 310 | Screw Driver, 5 in. long |

KNEE LIFTER

| | | |
|---------|-------|---|
| 228486 | 1 311 | Rock Lever Bracket with 200347C and three wood screws 7/8 in., No. 12 |
| 228361 | 1 311 | Rock Lever Bracket 228486 with 228359, 228363, 228367, 228386 and 228455 |
| 228359 | 1 311 | Rock Lever with two 350231C |
| 228370 | 1 311 | " " Extension with 200529C |
| 350231C | 1 311 | " " " Set Screw |
| 228363 | 1 311 | " " Hinge Pin |
| 228364 | 1 311 | " " Knee Plate with 350231C |
| 228388 | 1 311 | " " " " Arm |
| 350231C | 1 311 | " " " " " Set Screw |
| 350231C | 1 311 | " " " " " Set Screw |
| 228455 | 1 311 | " " Position Spring |
| 228365 | 1 311 | " " Rod |
| 200529C | 1 311 | " " " Set Screw |
| 228386 | 1 311 | " " Spring |
| 228367 | 1 311 | " " Stop Stud |
| 200347C | 1 311 | " " " " " Set Screw |
| 228371 | 1 311 | Knee Lifter Rock Lever complete, Nos. 228361, 228364, 228365, 228370 and 228388 |

(Other Knee Lifter parts are listed with parts of machine head).

Genuine SINGER Needles should be used in SINGER Machines. These Needles and their Containers are marked with the Company's Trade-Mark "SIMANCO." 1

Needles in Containers marked "FOR SINGER MACHINES" are NOT **SINGER** made needles. 2

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR "V" BELT DRIVE

| No. | Plate | Name |
|---------|-------|--|
| 259428 | 18312 | Brake (leather) |
| 259429 | 18312 | " Clamp |
| 200113F | 18312 | " " Screw |
| 225453 | 18312 | Frame with 202277 and 259660 |
| 225454 | 18312 | " Hinge Pin |
| 202277 | 18312 | " Oil Packing (wick) |
| 259660 | 18312 | " " Well Washer |
| 225455 | 18312 | " Spring |
| 225456 | 18312 | " Plunger |
| 259461 | 18312 | Pulley with 200380C |
| 200380C | 18312 | " Set Screw |
| 225381 | 18312 | Spindle |
| 225444 | 18312 | Stop Latch |
| 200056E | 18312 | " " Screw |
| 225458 | 18312 | " " Thumb Lever |
| 225459 | 18312 | " " " Hinge Stud |
| 225459 | 18312 | " " " Joint Stud |
| 202478 | 18312 | " " Trip Lever |
| 200299H | 18312 | " " " Hinge Screw |
| 225461 | 18312 | Tension Bracket with 201499H |
| 200082D | 18312 | " " Screw |
| 228026 | 18312 | " " " Washer |
| 2102 | 18312 | " Disc |
| 13710 | 18312 | " Spring |
| 201499H | 18312 | " Stud |
| 201572H | 18312 | " " Thumb Nut |
| 225462 | 18312 | Bobbin Winder Tension Bracket complete, Nos. 13710, 201572H, 225461 and two 2102 |
| 259662 | 18312 | Bobbin Winder and Tension Bracket Base |
| 259462 | 18312 | Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200113F, 200299H, 202478, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428, 259429, 259461, 259662, two each 225459 and wood screws 3/4 in., No. 12, R.H.B. |

BINDERS

BINDER (English)

FOR GAUGES UP TO 9/16 INCH

| No. | Plate | Name |
|----------|-------|--|
| 121444 | 23226 | Feed Dog, 13 teeth (16 teeth to the inch) |
| 25721 | 23226 | Folder |
| 207F | 23226 | " Screw |
| 7071 | 23226 | " " Washer |
| 25983 | 23226 | Presser Foot |
| 25722 | 23226 | Ribbon Tension |
| 190D | 23226 | " " Screw |
| 7071 | 23226 | " " " Washer |
| 121445XC | 23226 | Throat Plate |
| 26250 | 23226 | Binder complete, Nos. 190D, 207F, 25721, 25722, 25983, 121444, 121445 and two 7071 |

BINDER (English)

FOR HEAVY WORK

| | | |
|---------|-------|--|
| 12370 | 18359 | Feed Dog, 15 teeth (16 teeth to the inch) |
| 28334 | 18359 | Folder |
| 193D | 18359 | " Screw |
| 7071 | 18359 | " " Washer |
| 28676 | 18359 | Presser Foot |
| 28337 | 18359 | Ribbon Tension |
| 233J | 18359 | " " Screw |
| 28775XC | 18359 | Throat Plate |
| 28776 | 18359 | Binder complete, Nos. 193D, 7071, 12370, 28334, 28337, 28676, 28775 and two 233J |

BINDER ON SHANK

| | | |
|-------|-------|---|
| 35208 | 23228 | Binder on Shank to turn in both edges, for bias or straight binding, for skirts, wrappers, shirt waists, etc. |
| 26603 | 23228 | Feed Dog, 20 teeth (16 teeth to the inch), for 26605 and 26606 |
| 52055 | 23228 | Presser Foot |

| No. | Plate | Name |
|---------|-------|---|
| 26605XC | 23228 | Throat Plate (large needle hole), for 26603 |
| 26606XC | ----- | Throat Plate (small needle hole), for 26603 |

BINDER (Bias)

(WITH TAPE REEL)

FOR GENERAL WORK

FOR 7/8 IN. BIAS BINDING

| | | |
|---------|-------|--|
| 259778 | 18373 | Binder, for 7/8 in. binding |
| 259779 | 18373 | " Bracket |
| 350511D | 18373 | " " Thumb Screw |
| 225604H | 18373 | " " " Washer |
| 200126F | 18373 | " Screw |
| 202603 | 18373 | " " Washer |
| 259780 | 18373 | Feed Dog |
| 202090 | 18373 | Presser Foot Hinge Pin |
| 259781 | 18373 | " " Plate |
| 270643 | 18373 | " " Shank |
| 26231 | 18373 | " " Spring |
| 259782 | 18373 | Presser Foot (spring hinged) complete, Nos. 26231, 202090, 259781 and 270643 |
| 121412 | 18373 | Tape Reel Arm with 8879, 23263 and 120537 |
| 207D | 18373 | Tape Reel Arm Screw |
| 23263 | 18373 | " " " Steady Pin |
| 120536 | 18373 | " " Disc with 120538 and 120539 |
| 120537 | 18373 | " " " Pin |
| 8879 | 18373 | " " " Washer (cloth) |
| 120538 | 18373 | " " " Stud (wood) |
| 120539 | 18373 | " " " Sleeve (brass) |
| 259783 | 18373 | Throat Plate |
| 259784 | 18373 | Binder complete, for 7/8 in. bias binding, Nos. 207D, 120536, 121412, 200126F, 202603, 225604H, 259778 to 259780, 259782, 259783 and 350511D |

BINDER (Transverse) ON SHANK FOR FOLDED OR UNFOLDED BIAS BINDING

(WITH TAPE REEL)

FOR GENERAL WORK

FOR 3/4 IN., 7/8 IN. AND 1 IN. TAPE

| No. | Plate | Name |
|----------|-------|---|
| 121167 | 22919 | Binder Folder on Shank |
| 43525 | 22919 | " Steady Pin |
| 51097J | 22919 | " Thumb Screw |
| 3146 | 22919 | " " " Washer |
| 121397 | 22919 | Feed Dog, 18 teeth (16 teeth to the inch) |
| 121169 | 22919 | Presser Foot |
| 121412 | 22919 | Tape Reel Arm with 8879, 23263 and 120537 |
| 23263 | 22919 | Tape Reel Arm Steady Pin |
| 51097J | 22919 | " " " Thumb Screw |
| 120536 | 22919 | " " Disc with 120538 and 120539 |
| 120537 | 22919 | " " " Pin |
| 8879 | 22919 | " " " Washer (cloth) |
| 120538 | 22919 | " " " Stud (wood) |
| 120539 | 22919 | " " " Sleeve (brass) |
| 121398XC | 22919 | Throat Plate with 43525 |
| 121168 | 22919 | Binder (transverse) on Shank complete, Nos. 3146, 120536, 121167, 121169, 121397, 121398, 121412 and two 51097J |

BINDER (Transverse) ON THROW-OUT ARM FOR FOLDED OR UNFOLDED BIAS BINDING

(WITH TAPE REEL)

FOR GENERAL WORK

FOR 3/4 IN., 7/8 IN. AND 1 IN. TAPE

| | | |
|--------|-------|---------------------|
| 121732 | 23229 | Binder (transverse) |
| 121735 | 23229 | " Releasing Lever |
| 724F | 23229 | " " " Hinge Screw |
| 121736 | 23229 | " " " Spring |
| 192349 | 23229 | " " " Position Stud |
| 1443J | 23229 | Binder Screw |

BINDERS

| No. | Plate | Name |
|----------|-------|---|
| 121733 | 23229 | Binder Throw-out Arm with 192349 |
| 121734 | 23229 | " " " Bracket Rivet |
| 940F | 23229 | " " " Hinge Screw |
| 35610 | 23229 | " Washer |
| 121738 | 23229 | Feed Dog, 17 teeth (16 teeth to the inch) |
| 121169 | 23229 | Presser Foot |
| 120536 | 23229 | Tape Reel Disc with 120538 and 120539 |
| 120538 | 23229 | " " " Stud (wood) |
| 120539 | 23229 | " " " Sleeve (brass) |
| 120740 | 23229 | " " Pin |
| 121938XC | 23229 | Throat Plate with two 121734 |
| 121737 | 23229 | Binder (transverse) with Throw-out Arm complete, Nos. 724F, 940F, 35610, 120536, 120740, 121169, 121732, 121733, 121735, 121736, 121738, 121938XC and two 1443J |

BOBBIN HOLDER

| | | |
|--------|-------|---------------|
| 225434 | 18316 | Bobbin Holder |
|--------|-------|---------------|

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

FOR 5/16" ROUND BELT DRIVE

| | | |
|---------|-------|------------------------------|
| 259428 | 18312 | Brake (leather) |
| 259429 | 18312 | " Clamp |
| 200113F | 18312 | " " Screw |
| 225453 | 18312 | Frame with 202277 and 259660 |
| 225454 | 18312 | " Hinge Pin |
| 202277 | 18312 | " Oil Packing (wick) |
| 259660 | 18312 | " " Well Washer |
| 225455 | 18312 | " Spring |
| 225456 | 18312 | " " Plunger |
| 225368 | 18312 | Pulley with 200380C |
| 200380C | 18312 | " Set Screw |
| 225381 | 18312 | Spindle |
| 225444 | 18312 | Stop Latch |
| 200056E | 18312 | " " Screw |
| 225458 | 18312 | " " Thumb Lever |
| 225459 | 18312 | " " " Hinge Stud |
| 225459 | 18312 | " " " Joint Stud |
| 202478 | 18312 | " " Trip Lever |
| 200299H | 18312 | " " " Hinge Screw |
| 225461 | 18312 | Tension Bracket with 201499H |
| 200082D | 18312 | " " Screw |

BOBBIN WINDER

| No. | Plate | Name |
|---------|-------|--|
| 228026 | 18312 | Tension Bracket Screw Washer |
| 2102 | 18312 | " Disc |
| 13710 | 18312 | " Spring |
| 201499H | 18312 | " Stud |
| 201572H | 18312 | " " Thumb Nut |
| 225462 | 18312 | Bobbin Winder Tension Bracket complete, Nos. 13710, 201572H, 225461 and two 2102 |
| 259430 | 18312 | Bobbin Winder and Tension Bracket Base |
| 259431 | 18312 | Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200113F, 200299H, 202478, 225368, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428 to 259430, two each 225459 and wood screws 3/4 in., No. 12, R.H.B. |

CORDER (Adjustable)

FOR SHORT TURNS ON CUSHIONS

WHEN ORDERING STATE SIZE OR NUMBER

OF CORDS TO THE INCH

| | | |
|----------|-------|---|
| 26795 | 23228 | Cord Guide |
| 26796 | 23228 | " " Arm |
| 1044D | 23228 | " " " Hinge Screw |
| 120206 | 23228 | " " Bed with 457AL |
| 457AL | 23228 | " " Leveling Screw |
| 190D | 23228 | " " Screw |
| 120207 | 23228 | Corder complete, Nos. 190D, 1044D, 26795, 26796 and 120206 |
| 121446 | 23228 | Feed Dog, spiked teeth, 13 teeth (10 teeth to the inch), for 121447 |
| 120208 | 23228 | Presser Foot (grooved) |
| 121447XC | 23228 | Throat Plate, for 121446 |

BELT GUARD

| | | |
|---------|-------|--|
| 270153 | 18375 | Belt Guard Bracket |
| 350328H | 18375 | " " " Screw (2) |
| 200362C | 18375 | " " Set Screw (2) |
| 270152 | 18375 | " " with two 200362C |
| 270154 | 18375 | Belt Guard complete, Nos. 270152, 270153 and two 350328H |

FINGER GUARD

| No. | Plate | Name |
|--------|-------|--------------|
| 259502 | 18359 | Finger Guard |

GUIDE

| | | |
|-------|-------|---------------------|
| 26682 | 18360 | Guide (combination) |
|-------|-------|---------------------|

HEMMERS

HEMMERS (Foot)

| | | |
|----------|-------|---|
| 225423 | 18316 | Hemmer (foot), for 5/64 in.hem |
| 120938 | 23230 | " " " 3/32 in.hem |
| 225421 | 18316 | " " " 3/32 in.hem |
| 225424 | 18316 | " " " 1/8 in.hem |
| 120803 | 23230 | " " " 1/8 in.hem |
| 270120 | 18360 | " " " 1/8 in.hem, for hemming shirts |
| 225425 | 18316 | Hemmer (foot), for 9/64 in.hem |
| 120804 | 23230 | " " " 5/32 in.hem |
| 225422 | 18316 | " " " 5/32 in.hem |
| 120805 | 23230 | " " " 3/16 in.hem |
| 225426 | 18316 | " " " 3/16 in.hem |
| 36122 | 23230 | " " " 7/32 in.hem |
| 225427 | 18316 | " " " 7/32 in.hem |
| 120806 | 23230 | " " " 1/4 in.hem |
| 225428 | 18316 | " " " 1/4 in.hem |
| 120807 | 23230 | " " " 5/16 in.hem |
| 121761 | 23230 | " " " with 121981, for 1/8 in. hem, for hemming shirts |
| 121762 | 23230 | Hemmer (foot) with 121981, for 5/32 in. hem |
| 121760 | 23230 | Hemmer (foot), for 1/8 in.hem, for hemming shirts |
| 121758 | 23230 | Feed Dog, 13 teeth (16 teeth to the inch), for 121759 |
| 270121 | 18360 | Feed Dog, for 270122 |
| 121759XC | 23230 | Throat Plate (large needle hole), for 121758 |
| 270122 | 18360 | Throat Plate (small needle hole), for 270121 |
| 35710 | 23230 | Hemmer (foot), for 3/32 in.hem with guide on bottom to the right of needle hole |

| No. | Plate | Name |
|--------|-------|---|
| 35682 | 23230 | Hemmer (foot), for 1/8 in.hem with guide on bottom to the right of needle hole |
| 36524 | 23230 | Hemmer (foot), for 5/32 in.hem with guide on bottom to the right of needle hole |
| 35997 | 23230 | Hemmer (foot), for 3/16 in.hem with guide on bottom to the right of needle hole |
| 36309 | 23230 | Hemmer (foot), for 7/32 in.hem with guide on bottom to the right of needle hole |
| 36072 | 23230 | Hemmer (foot), for 1/4 in.hem with guide on bottom to the right of needle hole |
| 120898 | 23230 | Hemmer (foot), for 1/16 in.to 1/8 in. hem, for China Silk, etc. |
| 120911 | 23230 | Hemmer (foot), for 5/32 in.to 1/4 in. hem, for China Silk, etc. |
| 36413 | 23230 | Hemmer (foot), plain bottom, for 1/16 in.hem |
| 36414 | 23230 | Hemmer (foot), plain bottom, for 3/32 in.hem |
| 36480 | 23230 | Hemmer (foot), plain bottom, for 5/32 in.hem |
| 36416 | 23230 | Hemmer (foot), plain bottom, for 3/16 in.hem |
| 120837 | 23230 | Hemmer (foot), plain bottom, for 1/8 in.hem, slotted, for lace |
| 121981 | ----- | Hemmer Tongue, for 121761, 121762 and 121763 |

Note: When ordering No.121981, state width of hem and number of Hemmer for which it is required.

HEMMERS ON SHANK

| | | |
|-------|-------|---|
| 20163 | 23231 | Feed Dog, 16 teeth (16 teeth to the inch), for 1/16 in.stitch, for 20123 |
| 35926 | 23231 | Hemmer |
| 590D | 23231 | " Adjusting Screw |
| 1443B | 23231 | " Screw |
| 35927 | 23231 | " Shank |
| 35540 | 23231 | Hemmer on Shank complete with right hand lower guide, for lace, Nos. 1443B, 35926, 35927 and two 590D |
| 62527 | 23231 | Presser Foot Hinge Pin |
| 40316 | 23231 | " " Plate |
| 40317 | 23231 | " " Shank |
| 40318 | 23231 | Presser Foot (hinged) complete, for lace running, Nos. 40316, 40317 and 62527 |

| No. | Plate | Name |
|---------|-------|--|
| 20123XC | 23231 | Throat Plate, for 20163 |
| 26603 | 23231 | Feed Dog, 20 teeth (16 teeth to the inch), for 26605 and 26606 |
| 35236 | 23231 | Hemmer on Shank, for 7/16 in. hem |
| 52055 | 23231 | Presser Foot |
| 26605XC | 23231 | Throat Plate (large needle hole), for 26603 |
| 26606XC | ----- | Throat Plate (small needle hole), for 26603 |
| 26603 | 23232 | Feed Dog, 20 teeth (16 teeth to the inch), for 26605 and 26606 |
| 28627 | 23232 | Hemmer on Shank, for 1/8 in. to 5/8 in. gauges |
| 28628 | 23232 | Presser Foot, for 3/8 in. to 5/8 in. gauges |
| 26605XC | 23232 | Throat Plate (large needle hole), for 26603 |
| 26606XC | ----- | Throat Plate (small needle hole), for 26603 |
| 120991 | 23232 | Hemmer on Shank, for 1/16 in. to 1/4 in. hem |
| 120367 | 23232 | Hemmer on Shank, for handkerchief work |

PIPING ATTACHMENT

| | | |
|---------|-------|---|
| 44253 | 18315 | Feed Dog, 16 teeth (16 teeth to the inch), for 44255 and 44256 |
| 120977 | 18315 | Piping Attachment |
| 1443J | 18315 | " " Screw |
| 35245 | 18315 | Piping Attachment complete, for piping house dresses, Nos. 1443J and 120977 |
| 52056 | 18315 | Presser Foot |
| 44256XC | 18315 | Throat Plate (large needle hole), for 44253 |
| 44255XC | ----- | Throat Plate (small needle hole), for 44253 |

PRESSER FEET

| | | |
|---|-------|---|
| 36464 | 23236 | Presser Foot Spring Guide |
| 665J | 23236 | " " " Screw |
| 36465 | 23236 | Presser Foot (right hand spring guide) with 665J and 36464, for 1/32 in. to 5/16 in. gauges |
| Note: When ordering No. 36464 or No. 36465, state required distance from edge of goods to seam. | | |

| No. | Plate | Name |
|---|-------|--|
| 28726 | 18372 | Presser Foot (right hand spring guide) with 665J and 28725, for 1/32 in. to 1/4 in. gauges |
| 28725 | 18372 | Presser Foot Spring Guide |
| Note: When ordering No. 28725 or No. 28726, state required distance from edge of goods to seam. | | |
| 26638 | 18372 | Presser Foot (double toe), for gathering |
| 12335 | 23236 | Presser Foot (narrow) |
| 12435 | 23236 | " " with 228J (with needle hole on right hand side) |
| 228J | 23236 | Presser Foot Extension Screw |
| 36714 | 23236 | " " with 233D |
| 36715 | 23236 | " " Guide (right) with 36716 |
| 233D | 23236 | " " Set Screw |
| 36716 | 23236 | " " Stud |
| 36717 | 23236 | Presser Foot complete with Adjustable Guide (right), Nos. 36714 and 36715 |
| 270195 | 18372 | Presser Foot, for gathering |
| 270196 | 18372 | " " " slide fasteners |
| 36773 | 23236 | " " " braiding |
| 35528 | 23236 | " " (wide) |
| 120828 | 23236 | " " (single toe), for gathering, for fine work |
| 121763 | 23236 | Presser Foot with 121981 with Hemmer with Yielding Top Scroll |
| 20343 | 23236 | Presser Foot with guide on bottom to the right of needle hole |
| 12462 | 23236 | Presser Foot, for 1/8 in. to 1 in. gauges |
| Note: When ordering No. 12462, give width of turned edge from seam. | | |
| 12463 | 23236 | Presser Foot with Strip Guide |
| 36654 | 23236 | " " for tucking shirt bosoms |
| 40315 | 23236 | " " long stitch for general work |
| 40322 | 23236 | Presser Foot (narrow) |
| 26276 | 23236 | " " Hinge Pin |
| 20133 | 23236 | " " Plate |
| 19223 | 23236 | " " Shank |
| 20134 | 23236 | Presser Foot (hinged) complete, for 3/16 in. to 1/4 in. gauges for collar and cuff work, Nos. 19223, 20133 and 26276 |
| 7298 | 23236 | Presser Foot Hinge Pin |
| 20360 | 23236 | " " Plate |
| 19335 | 23236 | " " Shank |
| 20361 | 23236 | Presser Foot (hinged) plain bottom complete, Nos. 7298, 19335 and 20360 |
| 18055 | 18372 | Presser Foot Hinge Pin |
| 143213 | 18372 | " " Plate |
| 143216 | 18372 | " " " |
| 143209 | 18372 | " " Shank |
| 143217 | 18372 | " " " |
| 143317 | 18372 | " " Yielding Plate |
| 143318 | 18372 | " " " " |
| 143320 | 18372 | " " " " Spring |

PRESSER FEET

| No. | Plate | Name |
|--------|-------|---|
| 143215 | 18372 | Presser Foot (hinged) long toes, with left hand Yielding Plate complete, Nos. 18055, 143209, 143213, 143317 and 143320 |
| 143219 | 18372 | Presser Foot (hinged) long toes, with right hand Yielding Plate complete, Nos. 18055, 143216, 143217, 143318 and 143320 |

PRESSER FEET

WITH GRADUATED ADJUSTABLE GUIDES

| | | |
|-------|-------|---|
| 35134 | 18359 | Presser Foot with 36696 |
| 35002 | 18359 | " " Extension |
| 35003 | 18359 | " " Graduated Adjustable Guide (long, left) |
| 35004 | 18359 | Presser Foot Graduated Adjustable Guide (long, right) |
| 35005 | 18359 | Presser Foot Graduated Adjustable Guide (short, right) |
| 35006 | 18359 | Presser Foot Graduated Adjustable Guide (short, right) flush |
| 35135 | 18359 | Presser Foot Graduated Adjustable Guide Clamp |
| 35136 | 18359 | Presser Foot Graduated Adjustable Guide Clamp Lever |
| 337B | 18359 | Presser Foot Graduated Adjustable Guide Clamp Screw |
| 36696 | 18359 | Presser Foot Graduated Adjustable Guide Clamp Steady Pin |
| 35137 | 18359 | Presser Foot with Extension and Graduated Adjustable Guides complete, Nos. 337B, 35002, to 35006 and 35134 to 35136 |

PRESSER FOOT EXTENSIONS

| | | |
|-------|-------|---|
| 62527 | 23236 | Presser Foot Hinge Pin |
| 20155 | 23236 | " " Plate |
| 20156 | 23236 | " " Shank |
| 20157 | 23236 | Presser Foot (hinged) complete, Nos. 228J, 20155, 20156 and 62527 |
| 26279 | 23236 | Presser Foot Extension, 1/16 inch |
| 26280 | 23236 | " " " 1/8 inch |
| 26281 | 23236 | " " " 1/4 inch |
| 26282 | 23236 | " " " 3/8 inch |
| 26283 | 23236 | " " " 1/2 inch |
| 228J | 23236 | " " " Screw |

MISCELLANEOUS PARTS

| No. | Plate | Name |
|---------|-------|--|
| 143185 | 18347 | Feed Bar Body with two each 1607C and 51220AL |
| 51220AL | 18347 | Feed Bar Body Adjusting Screw |
| 1607C | 18347 | " " " " Lock Nut |
| 704C | 18347 | " " " Screw |
| 143186 | 18347 | " " Shank |
| 143187 | 18347 | Feed Bar (tilting adjustable) complete, Nos. 704C, 143185 and 143186 |
| 228394 | 18347 | Spool Pin |

USED IN CONJUNCTION WITH THREAD UNWINDER

| | | |
|--------|-------|---|
| 259370 | 18362 | Spool Pin |
| 259378 | 18362 | " " Arm with 217E and 259379 |
| 448AL | 18362 | " " " Set Screw |
| 232896 | 18362 | " " " Bracket with two 448AL |
| 448AL | 18362 | " " " Set Screw |
| 259371 | 18362 | " " Cap (bakelite) |
| 1010F | 18362 | " " " Hinge Screw |
| 259379 | 18362 | " " Retaining Spring |
| 217E | 18362 | " " " Screw |
| 259372 | 18362 | " " Washer |
| 259373 | 18362 | Spool Pin complete, Nos. 1010F and 259370 to 259372 |
| 60913 | 18362 | Spool Weight with 60914 |
| 60914 | 18362 | " " Center Pin |
| 225377 | 18362 | " Wire, for small spools |
| 27739 | 18362 | Thread Cone (wood) |
| 225390 | 18362 | " " Holder |

PULLER FEED

| No. | Plate | Name |
|----------|-------|--|
| 259463 | 18313 | Balance Wheel, belt grooves 2-1/8 and 1 in. diam. with 201346AL and 350107AL |
| 259464 | 18313 | Balance Wheel 259463 with 270004 |
| 259465 | 18313 | " " belt grooves 2.9 in. outside diam., for 3/8 in. "v" bolt and 1 in. bottom diam., for round belt with 201346AL and 350107AL |
| 259466 | 18313 | Balance Wheel 259465 with 270004 |
| 350107AL | 18313 | " " Position Screw |
| 201346AL | 18313 | " " Set Screw |
| 259467 | 18313 | Puller Feed Base with 200364C, 259061 two each 200902D and 205796 |
| 259055 | 18313 | Puller Feed Base Block (wood) (for use where attachment is not set into the table) |
| 200710 | 18313 | Puller Feed Base Bolt |
| 9842R | 18313 | " " " " Washer |
| 225190 | 18313 | " " Driving Belt size 1/4 in. diam. length 39-1/2 in., with 25128 |
| 25128 | 18313 | Puller Feed Driving Belt Hook |
| 237751 | 18313 | " " " Gear with 200382C and 201220C |
| 201220C | 18313 | Puller Feed Driving Gear Position Screw |
| 200382C | 18313 | Puller Feed Driving Gear Set Screw |
| 259057 | 18313 | " " " Pinion |
| 200095B | 18313 | " " " Cap Screw |
| 259468 | 18313 | " " " Pulley (belt groove 4-1/4 in. diam.) with 200373C |
| 200373C | 18313 | Puller Feed Driving Pulley Set Screw |
| 259469 | 18313 | " " " " Shaft |
| 259470 | 18313 | " " " " " Collar with 201188C |
| 201188C | 18313 | Puller Feed Driving Pulley Shaft Collar Set Screw |
| 200364C | 18313 | Puller Feed Driving Pulley Shaft Set Screw |
| 259471 | 18313 | Puller Feed Roll and Shaft (lower) with 200364C |
| 259470 | 18313 | Puller Feed Roll and Shaft (lower) Collar with 201188C |
| 201188C | 18313 | Puller Feed Roll and Shaft (lower) Collar Set Screw |
| 200364C | 18313 | Puller Feed Roll and Shaft (lower) Extension Set Screw |
| 259472 | 18313 | Puller Feed Roll and Shaft (upper) |
| *259061 | ----- | " " " " " " Bearing |

PULLER FEED

| No. | Plate | Name |
|---------|-------|--|
| 200902D | 18313 | Puller Feed Roll and Shaft (upper) Bearing Screw |
| 205796 | 18313 | Puller Feed Roll and Shaft (upper) Bearing Spring |
| 259063 | 18313 | Puller Feed Roll and Shaft Gear with 200394C |
| 200394C | 18313 | Puller Feed Roll and Shaft Gear Set Screw |
| 259064 | 18313 | Puller Feed Work Guide (wood) |
| 259474 | 18313 | Puller Feed Device complete, Nos. 200095B, 225190, 237751, 259055, 259057, 259064, 259464, 259467 to 259469, 259471, 259472, two each 9842R, 200710, 259063 and 259470 |

Note: Balance Wheel No. 259466, for machines with "v" belt drive will be furnished with this Device complete in place of Balance Wheel No. 259454 if so specified on order.

THREAD UNWINDER

| | | |
|---------|-------|--|
| 225257 | 18362 | Spool Rest (for two spools) (flat) with 201018C |
| 150203 | 18362 | Spool Rest Cushion (felt) |
| 225388 | 18362 | " " Rod |
| 200383C | 18362 | " " " Set Screw |
| 201018C | 18362 | " " " Set Screw |
| 259658 | 18362 | " Stand with 200383C |
| 225391 | 18362 | Thread Guide |
| 201696H | 18362 | " " Lock Nut |
| 225326 | 18362 | " " Position Cup |
| 225324 | 18362 | " " Rod with 208AL and 225322 |
| 208AL | 18362 | " " " Screw |
| 225322 | 18362 | " " " Washer |
| 225258 | 18362 | Thread Unwinder (for two spools) complete, Nos. 201696H, 225257, 225324, 225326, 225388, 259658, two each 105203, 225391 and three wood screws 7/8 in., No. 12 |

TUCKER (Long Arm)

| | | |
|--------|-------|---|
| 259541 | 18343 | Presser Foot, 50 needle hole |
| 259542 | 18343 | " " 53 needle hole, 1/16 in. gauge to left of needle hole |
| 259543 | 18343 | Presser Foot, 53 needle hole, 3/32 in. gauge to left of needle hole |

| No. | Plate | Name |
|---------|-------|---|
| 259544 | 18343 | Presser Foot, 53 needle hole, 1/8 in. gauge to left of needle hole |
| 259545 | 18343 | Presser Foot, 53 needle hole, 5/32 in. gauge to left of needle hole |
| 36387 | 18343 | Space Guide |
| 259529 | 18343 | Space Guide Base with 35512, 35514, 201525E, 225708, 350472H and two 1426E |
| 350472H | 18343 | Space Guide Base Hinge Screw |
| 201525E | 18343 | " " " " " Nut |
| 225708 | 18343 | " " " Spring |
| 35511 | 18343 | " " Indicator |
| 35512 | 18343 | " " Pin |
| 35513 | 18343 | " " Stop (left) |
| 35514 | 18343 | " " " Guide Pin |
| 1426E | 18343 | " " " Screw Stud |
| 1657D | 18343 | " " " Thumb Nut |
| 17718 | 18343 | " " " " " Washer |
| 35515 | 18343 | " " " (right) |
| 1426E | 18343 | " " " Screw Stud |
| 1657D | 18343 | " " " Thumb Nut |
| 17718 | 18343 | " " " " " Washer |
| 50053W | 18343 | " " " Thumb Screw |
| 259530 | 18343 | Space Guide complete, Nos. 35511, 35513, 35515, 36387, 50053W, 259529, two each 1657D and 17718 |
| 35517 | 18343 | Tuck Guide Arm |
| 1177J | 18343 | " " " Screw |
| 35518 | 18343 | " " Base |
| 50134E | 18343 | " " " Screw Stud |
| 36389 | 18343 | " " Bracket |
| 307C | 18343 | " " " Screw Center |
| 56814 | 18343 | " " " " " 307C with 1513J |
| 1513J | 18343 | Tuck Guide Bracket Screw Center Nut |
| 36390 | 18343 | " " " Spring |
| 36391 | 18343 | " " " Plate |
| 9D | 18343 | " " " Screw |
| 423C | 18343 | " " " Stop Screw |
| 1520J | 18343 | " " " " " Nut |
| 36392 | 18343 | " " Frame |
| 36393 | 18343 | " " " Spring |
| 1510E | 18343 | " " " Nut |
| 35524 | 18343 | " " " Washer |
| 803C | 18343 | " " " Stop Screw |
| 1520J | 18343 | " " " " " Nut |
| 35511 | 18343 | " " Indicator |
| 35525 | 18343 | " " Plate |
| 1115F | 18343 | " " Screw |
| 36394 | 18343 | Tuck Guide complete, Nos. 9D, 423C, 803C, 1510E, 35511, 35517, 35518, 35524, 35525, 36389 to 36393, 50134E, two each 1115F, 1177J, 1520J, 56814 and three wood screws 1-1/4 in., No. 10 |
| 259532 | 18343 | Tucker (long arm) complete, Nos. 36394, 259530 and 259541 |

WOOD BASE

For Use with Tuck Folder

| No. | Plate | Name |
|---------|-------|--|
| 228395 | 18361 | Auxiliary Knee Lifter Rock Lever Rod with 227785 |
| 228396 | 18361 | Auxiliary Knee Lifter Rock Lever Rod Bracket |
| *227785 | ----- | Auxiliary Knee Lifter Rock Lever Rod Cap |
| 79627 | 18361 | Bench Stand Section (back) with two each 20022, 27878, 150962 and wood screws 3-1/2 in., No. 14 |
| 79626 | 18361 | Bench Stand Section (front) with wood screw 1-1/2 in., No. 12, two each 20022, 27878 and wood screws 3-1/2 in., No. 14 |
| 44243 | 18361 | Machine Hinge Connection |
| 2809 | 18361 | " " " Hinge Pin |
| 33887 | 18361 | " " Plate |
| 150962 | 18361 | Machine Hinge complete, Nos. 2809, 33887, 44243 and wood screw 1 in., No. 14, F.H. blacked |
| 20022 | 18361 | Machine Rest (felt) |
| 27878 | 18361 | " " Rivet |
| 79628 | 18361 | Bench Stand (sectional) complete, Nos. 79626 and 79627 |

FITTINGS

FOR BUTTON STAYS

| | | |
|---------|-------|--|
| 26603 | 18315 | Feed Dog, 20 teeth (16 teeth to the inch), for 26605 and 26606 |
| 121653 | 18315 | Hemmer on Shank, for 9/16 in. hem |
| 7298 | 18315 | Presser Foot Hinge Pin |
| 120143 | 18315 | " " Plate |
| 19335 | 18315 | " " Shank |
| 120144 | 18315 | Presser Foot (hinged) complete, Nos. 7298, 19335 and 120143 |
| 26605XC | 18315 | Throat Plate (large needle hole), for 26603 |
| 26606XC | ----- | Throat Plate (small needle hole), for 26603 |

FOR CHAINING OFF

| No. | Plate | Name |
|--------|-------|--|
| 142057 | 18374 | Feed Dog, 21 teeth (22 teeth to the inch), for 142060 and 142061 |
| 142062 | 18374 | Feed Dog, 17 teeth (18 teeth to the inch), for general and shirt work, for 142060 and 142061 |
| 62527 | 18374 | Presser Foot Hinge Pin |
| 142058 | 18374 | " " Plate |
| 121944 | 18374 | " " Shank |
| 121945 | 18374 | " " Spring |
| 142059 | 18374 | Presser Foot (spring hinged) complete, Nos. 62527, 121944, 121945 and 142058 |
| 142060 | 18374 | Throat Plate (small needle hole), for 142057 and 142062 |
| 142061 | 18374 | Throat Plate (large needle hole), for 142057 and 142062 |

FOR COLLAR WORK

(FIRST STITCHING)

| | | |
|---------|-------|--|
| 20164 | 23219 | Feed Dog, 16 teeth (16 teeth to the inch), for 1/8 in. stitch, for 52190 |
| 52189 | 23219 | Presser Foot (solid) |
| 52190XC | 23219 | Throat Plate, for 20164 |

FOR COLLAR WORK

(SECOND STITCHING)

| | | |
|----------|-------|--|
| 121646 | 23219 | Feed Dog, 12 teeth (16 teeth to the inch), for 121649 |
| 121647 | 23219 | Presser Foot with 121648 and two 337J, for 3/16 in., 7/32 in., 1/4 in., 9/32 in. and 5/16 in. gauges |
| 121648 | 23219 | Presser Foot Edge Guide, for 3/16 in., 7/32 in., 1/4 in., 9/32 in. and 5/16 in. gauges |
| 337J | 23219 | Presser Foot Edge Guide Screw |
| 121649XC | 23219 | Throat Plate, for 121646 |

FOR COLLAR AND CUFF WORK

| No. | Plate | Name |
|---------|-------|--|
| 20163 | 23219 | Feed Dog, 16 teeth (16 teeth to the inch), for 1/16 in. stitch |
| 20164 | 23219 | Feed Dog, 16 teeth (16 teeth to the inch), for 1/8 in. stitch |
| 52188 | 23219 | Presser Foot (solid), for cuff work |
| 52189 | 23219 | " " " " collar work |
| 20123XC | 23219 | Throat Plate, for 20163 and 20164 |

FOR CUFF WORK

| | | |
|---------|-------|--|
| 20164 | 23220 | Feed Dog, 16 teeth (16 teeth to the inch), for 1/8 in. stitch, for 52190 |
| 52188 | 23220 | Presser Foot (solid) |
| 52190XC | 23220 | Throat Plate, for 20164 |

FOR CURTAIN WORK

| | | |
|----------|-------|---|
| 143165 | 23220 | Feed Dog, 18 teeth (14 teeth to the inch) |
| 26276 | 23220 | Presser Foot Hinge Pin |
| 143166 | 23220 | " " Plate |
| 143167 | 23220 | " " Shank |
| 52544 | 23220 | " " Spring |
| 143168 | 23220 | Presser Foot (spring hinged) complete, Nos. 26276, 52544, 143166 and 143167 |
| 143169XC | 23220 | Throat Plate (large needle hole) |

FOR GENERAL WORK

| | | |
|----------|-------|--|
| 143174 | 23220 | Feed Dog, 17 teeth (14 teeth to the inch), for 143175 |
| 143175XC | 23220 | Throat Plate (large needle hole), for 143174 |
| 52031 | 23221 | Feed Dog, 19 teeth (22 teeth to the inch), for 52032 and 52033 |
| 62527 | 23221 | Presser Foot Hinge Pin |
| 24544 | 23221 | " " Plate |
| 24982 | 23221 | " " Shank |
| 26231 | 23221 | " " Spring |

| No. | Plate | Name |
|----------|-------|---|
| 24983 | 23221 | Presser Foot (spring hinged) complete, Nos. 24544, 24982, 26231 and 62527 |
| 52032XC | ----- | Throat Plate (large needle hole), for 52031 |
| 52033XC | 23221 | Throat Plate (small needle hole), for 52031 |
| 127229 | 23221 | Feed Dog, 17 teeth (14 teeth to the inch), for 127238 |
| 62527 | 23221 | Presser Foot Hinge Pin |
| 127233 | 23221 | " " Plate |
| 52390 | 23221 | " " Shank |
| 26231 | 23221 | " " Spring |
| 127234 | 23221 | Presser Foot (spring hinged) complete, Nos. 26231, 52390, 62527 and 127233 |
| 131256 | 23221 | Presser Foot Hinge Pin |
| 127257 | 23221 | " " Plate |
| 127258 | 23221 | " " Shank with 665J |
| 127259 | 23221 | " " Thread Cutter |
| 239E | 23221 | " " " " Screw |
| 127260 | 23221 | Presser Foot (hinged) complete with Thread Cutter, Nos. 239E, 127257 to 127259 and 131256 |
| 127238XC | 23221 | Throat Plate, for 127229 |
| 127087 | 23221 | Feed Dog, 19 teeth (16 teeth to the inch), for 127106 and 127107 |
| 127106XC | 23221 | Throat Plate (large needle hole), for 127087 |
| 127107XC | ----- | Throat Plate (small needle hole), for 127087 |
| 121446 | 23222 | Feed Dog, spiked teeth, 13 teeth (10 teeth to the inch), for 20356, 20357 and 270128 |
| 20356XC | 23222 | Throat Plate (large needle hole), for 121446 |
| 20357XC | ----- | Throat Plate (small needle hole), for 121446 |
| 44158 | 23222 | Feed Dog, 15 teeth (14 teeth to the inch), for 44162 |
| 26276 | 23222 | Presser Foot Hinge Pin |
| 44159 | 23222 | " " Plate |
| 44160 | 23222 | " " Shank |
| 44161 | 23222 | Presser Foot (hinged) complete, Nos. 26276, 44159 and 44160 |
| 44162XC | 23222 | Throat Plate, for 44158 |
| 20117 | 18345 | Feed Dog, for shirt work, beveled, for hemmer, 16 teeth (16 teeth to the inch) |
| 20124XC | 18345 | Throat Plate (large needle hole), for 20117 |
| 127087 | 23221 | Feed Dog, 19 teeth (16 teeth to the inch), for 270127 |
| 270127 | 18345 | Throat Plate (large needle hole), for 127087 |
| 121446 | 23228 | Feed Dog, spiked teeth, 13 teeth (10 teeth to the inch), for 270128 |
| 270128 | 18345 | Throat Plate (large needle hole), for 121446 |

| No. | Plate | Name |
|--------|-------|---|
| 44252 | 23224 | Feed Dog, 12 teeth (12 teeth to the inch), for 270129 |
| 44253 | 23224 | Feed Dog, 16 teeth (16 teeth to the inch), for 270129 |
| 270129 | 18345 | Throat Plate (large needle hole), for 44252 and 44253 |
| 270130 | 18345 | Throat Plate (large needle hole), for 26603 |

FOR HEMMING BOTTOM OF DRESS SHIRTS

| | | |
|--------|-------|---|
| 270121 | 18374 | Feed Dog, for 270122 |
| 270120 | 18374 | Hemmer Foot, 1/8 in. hem |
| 270134 | 18374 | " " 5/32 in. hem |
| 270136 | 18374 | " " 3/16 in. hem |
| 270122 | 18374 | Throat Plate, small needle hole, for 270121 |

FOR QUILTING

| | | |
|--------|-------|--|
| 270114 | 18359 | Presser Bar Bushing (for use with Quilter 120485) |
| 120479 | 18359 | Quilter Guide (left) |
| 120480 | 18359 | " " (right) |
| 120481 | 18359 | " " Bracket |
| 120482 | 18359 | " " " 120481 with 120483 and two 209AL |
| 209AL | 18359 | Quilter Guide Bracket Screw |
| 120483 | 18359 | " " Disengaging Sleeve |
| 209AL | 18359 | " " " " Set Screw |
| 120484 | 18359 | Quilter Guide Disengaging Sleeve Spring |
| 602D | 18359 | Quilter Guide Disengaging Sleeve Spring Screw |
| 120485 | 18359 | Quilter complete, Nos. 602D, 120479, 120480, 120482 and 120484 |

FOR SHIRT WORK

| | | |
|----------|-------|---|
| 143170 | 23222 | Feed Dog, 16 teeth (16 teeth to the inch), for 143171 |
| 143171XC | 23222 | Throat Plate (large needle hole), for 143170 |
| 20159 | 18316 | Feed Dog, 16 teeth (16 teeth to the inch), for 20160 |

FITTINGS

| No. | Plate | Name |
|---------|-------|--|
| 143172 | 18316 | Feed Dog, 18 teeth (18 teeth to the inch), for 20160 |
| 143173 | 18316 | Feed Dog, 20 teeth (20 teeth to the inch), for 20160 |
| 20160XC | 18316 | Throat Plate (large needle hole), for 20159, 143172 and 143173 |
| 26603 | 23224 | Feed Dog, 20 teeth (16 teeth to the inch), for 26605, 26606 and 270130 |
| 7298 | 23224 | Presser Foot Hinge Pin |
| 19334 | 23224 | " " Plate |
| 19335 | 23224 | " " Shank |
| 19336 | 23224 | Presser Foot (hinged) complete, Nos. 7298, 19334 and 19335 |
| 26605XC | 23224 | Throat Plate (large needle hole), for 26603 |
| 26606XC | ----- | Throat Plate (small needle hole), for 26603 |
| 142057 | 18360 | Feed Dog, 21 teeth (22 teeth to the inch), for 142060 |
| 62527 | 18360 | Presser Foot Hinge Pin |
| 142058 | 18360 | " " Plate |
| 121944 | 18360 | " " Shank |
| 121945 | 18360 | " " Spring |
| 142059 | 18360 | Presser Foot (spring hinged) complete, Nos. 62527, 121944, 121945 and 142058 |
| 142060 | 18360 | Throat Plate (small needle hole), for 142057 |

FOR SHOULDER JOININGS

| | | |
|---------|-------|--|
| 26603 | 23224 | Feed Dog, 20 teeth (16 teeth to the inch), for 26605 and 26606 |
| 121662 | 23224 | Joining Attachment with 121844 |
| 121844 | ----- | " " Shank, for 121662 |
| 121663 | 23224 | Presser Foot |
| 26605XC | 23224 | Throat Plate (large needle hole), for 26603 |
| 26606XC | ----- | Throat Plate (small needle hole), for 26603 |

FOR SLEEVE PLACKETS (Facing)

| | | |
|---------|-------|--|
| 121655 | 23225 | Binder on Shank |
| 26603 | 23225 | Feed Dog, 20 teeth (16 teeth to the inch), for 26605 and 26606 |
| 121656 | 23225 | Presser Foot |
| 26605XC | 23225 | Throat Plate (large needle hole), for 26603 |
| 26606XC | ----- | Throat Plate (small needle hole), for 26603 |

FITTINGS

FOR TAILOR WORK

| No. | Plate | Name |
|---------|-------|--|
| 44252 | 23224 | Feed Dog, 12 teeth (12 teeth to the inch), for 44255 and 44256 |
| 44253 | 23224 | Feed Dog, 16 teeth (16 teeth to the inch), for 44255 and 44256 |
| 36574 | 23224 | Presser Foot |
| 36575 | 23224 | " " 36574 with 36576 and two 50202J |
| 36576 | 23224 | Presser Foot Finger Guard |
| 50202J | 23224 | " " " " Screw |
| 44256XC | 23224 | Throat Plate (large needle hole), for 44252 and 44253 |
| 44255XC | ----- | Throat Plate (small needle hole), for 44252 and 44253 |
| 44136 | 23225 | Feed Dog, 15 teeth (16 teeth to the inch), for 44137 |
| 12142 | 23225 | Presser Foot |
| 20458 | 23225 | " " " |
| 44137XC | 23225 | Throat Plate, for 44136 |
| 52462 | 23226 | Feed Dog, 19 teeth (22 teeth to the inch), for 52463 |
| 52463XC | 23226 | Throat Plate, for 52462 |

FOR YOKING

| | | |
|---------|-------|--|
| 121658 | 23226 | Edge Folder with Edge Guide on Shank |
| 26603 | 23226 | Feed Dog, 20 teeth (16 teeth to the inch), for 26605 and 26606 |
| 7298 | 23226 | Presser Foot Hinge Pin |
| 121659 | 23226 | " " Plate |
| 19223 | 23226 | " " Shank |
| 121660 | 23226 | Presser Foot (hinged) complete, Nos. 7298, 19223 and 121659 |
| 26605XC | 23226 | Throat Plate (large needle hole), for 26603 |
| 26606XC | ----- | Throat Plate (small needle hole), for 26603 |

Genuine SINGER Needles should be
used in SINGER Machines.
These Needles and their Containers
are marked with the
Company's Trade-Mark "SIMANCO." 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

NUMERICAL LIST OF PARTS

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|---|
| 9D | 18343 | Tucker Tuck Guide Bracket Spring Screw, for 36394 |
| 176J | 18306 | Presser Foot Screw, for 270059 |
| 190D | 23226 | Binder Ribbon Tension Screw, for 26250 |
| 190D | 23228 | Corder Cord Guide Screw, for 120207 |
| 193D | 18359 | Binder Folder Screw, for 28776 |
| 207F | 23226 | " " " " 26250 |
| 207D | 18373 | Tape Reel Arm Screw, for 259784 |
| 208AL | 18362 | Thread Unwinder Thread Guide Rod Screw, for 225324 |
| 209AL | 18359 | Quilter Guide Bracket Screw, for 120482 |
| 209AL | 18359 | " " Disengaging Sleeve Set Screw, for 120482 |
| 217E | 18362 | Thread Unwinder Spool Pin Retaining Spring Screw, for 259378 |
| 228J | 23236 | Presser Foot Extension Screw, for 12435 and 20157 |
| 233J | 18359 | Binder Ribbon Tension Screw, for 28776 |
| 233D | 23236 | Presser Foot Guide Set Screw, for 36714 |
| 239E | 23221 | " " Thread Cutter Screw, for 127260 |
| 307C | 18343 | Tucker Tuck Guide Bracket Screw Center, for 56814 |
| 337J | 23219 | Presser Foot Edge Guide Screw, for 121647 |
| 337B | 18359 | Presser Foot Graduated Adjustable Guide Clamp Screw, for 35137 |
| 401D | 18380 | Rotary Take-up (large) Screw |
| 423C | 18343 | Tucker Tuck Guide Bracket Stop Screw, for 36394 |
| 446C | 18380 | Thread Take-up Spring Regulator Set Screw |
| 448AL | 18362 | Thread Unwinder Spool Pin Arm Bracket Set Screw, for 232896 |
| 448AL | 18362 | Thread Unwinder Spool Pin Arm Set Screw, for 232896 |
| 457AL | 23228 | Corder Cord Guide Bed Levelling Screw, for 120206 |
| 590D | 23231 | Hemmer Adjusting Screw, for 35540 |
| 591F | 18379 | Rotating Hook Bobbin Case Tension Spring Regulating Screw, for 52236 |
| 592E | 18379 | Rotating Hook Bobbin Case Latch Stop Screw, for 52237 |
| 602D | 18359 | Quilter Guide Disengaging Sleeve Spring Screw, for 120485 |
| 665J | 18372 | Presser Foot Spring Guide Screw, for 28726, 36465 and 127258 |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|--------|-------|--|
| 691F | 18383 | Stitch Regulating Index Plate Screw |
| 691F | 18364 | Throat Plate Screw |
| 704C | 18347 | Feed Bar Body Screw, for 143187 |
| 724F | 23229 | Binder Releasing Lever Hinge Screw, for 121737 |
| 803C | 18343 | Tucker Tuck Guide Frame Stop Screw, for 36394 |
| 940F | 23229 | Binder Throw-out Arm Hinge Screw, for 121737 |
| 1010F | 18362 | Thread Unwinder Spool Pin Cap Hinge Screw, for 259373 |
| 1044D | 23228 | Corder Cord Guide Arm Hinge Screw, for 120207 |
| 1053E | 18379 | Rotating Hook Thread Guard Screw, for 270869 |
| 1115F | 18343 | Tucker Tuck Guide Screw, for 36394 |
| 1177J | 18343 | " " " Arm Screw, for 36394 |
| 1253AL | 18379 | Rotating Hook Set Screw, for 270868 |
| 1367E | 18379 | " " " Section Screw, for 270870 |
| 1380E | 18379 | " " " Bobbin Case Tension Spring Screw, for 52236 |
| 1426E | 18343 | Tucker Space Guide Stop (left) Screw Stud, for 259529 |
| 1426E | 18343 | Tucker Space Guide Stop (right) Screw Stud, for 259529 |
| 1443J | 23229 | Binder Screw, for 121737 |
| 1443B | 23231 | Hemmer Screw, for 35540 |
| 1443J | 18315 | Piping Attachment Screw, for 35245 |
| 1510E | 18343 | Tucker Tuck Guide Frame Spring Nut, for 36394 |
| 1513J | 18343 | Tucker Tuck Guide Bracket Screw Center Nut, for 56814 |
| 1520J | 18343 | Tucker Tuck Guide Bracket Stop Screw Nut, for 36394 |
| 1520J | 18343 | Tucker Tuck Guide Frame Stop Screw Nut, for 36394 |
| 1560C | 18380 | Tension Thumb Nut, for 52098 |
| 1607C | 18347 | Feed Bar Body Adjusting Screw Lock Nut, for 143185 |
| 1657D | 18343 | Tucker Space Guide Stop (left) Thumb Nut, for 259530 |
| 1657D | 18343 | Tucker Space Guide Stop (right) Thumb Nut, for 259530 |
| 2102 | 18312 | Bobbin Winder Tension Disc, for 225462 |
| 2102 | 18380 | Tension Disc, for 270087 |
| 2809 | 18361 | Machine Hinge Connection Hinge Pin, for 150962 |
| 2974 | 18379 | Rotating Hook Bobbin Case Latch Lever Fulcrum Pin, for 40393 |
| 2975 | 18379 | Rotating Hook Bobbin Case Latch Spring, for 52237 |
| 3146 | 22919 | Binder Thumb Screw Washer, for 121168 |
| 7071 | 18359 | Binder Folder Screw Washer for 26250 and 28776 |
| 7071 | 23226 | Binder Ribbon Tension Screw Washer, for 26250 |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|---------|-------|---|
| 7298 | 18315 | Presser Foot Hinge Pin for 19336, 20361, 120144 and 121660 |
| 8879 | 18373 | Tape Reel Disc Pin Washer (cloth), for 121412 |
| 9842R | 18313 | Puller Feed Base Bolt Washer, for 259474 |
| 12142 | 23225 | Presser Foot |
| 12335 | 23236 | " " (narrow) |
| 12361 | 18310 | Machine Hinge Connection |
| 12370 | 18359 | Feed Dog, 15 teeth (16 teeth to the inch), for 28776 |
| 12435 | 23236 | Presser Foot with 228J (with needle hole on right hand side) |
| 12462 | 23236 | Presser Foot, for 1/8 in. to 1 in. gauges |
| 12463 | 23236 | Presser Foot with Strip Guide |
| 13710 | 18312 | Bobbin Winder Tension Spring, for 225462 |
| 13710 | 18380 | Tension Spring, for 270087 |
| 17718 | 18343 | Tucker Space Guide Stop (left) Thumb Nut Washer, for 259530 |
| 17718 | 18343 | Tucker Space Guide Stop (right) Thumb Nut Washer, for 259530 |
| 18055 | 18372 | Presser Foot Hinge Pin, for 143215 and 143219 |
| 19223 | 23236 | Presser Foot Shank, for 20134 and 121660 |
| 19334 | 23224 | Presser Foot Plate, for 19336 |
| 19335 | 23224 | " " Shank, for 19336, 20361 and 120144 |
| 19336 | 23224 | Presser Foot (hinged) complete, Nos. 7298, 19334 and 19335 |
| 20022 | 18361 | Machine Rest (felt), for 79626 and 79627 |
| 20117 | 18345 | Feed Dog, for Shirt Work, beveled, for Hemmer, 16 teeth (16 teeth to the inch), for 20124 |
| 20123XC | 23231 | Throat Plate, for 20163 and 20164 |
| 20124XC | 18345 | " " (large needle hole), for 20117 |
| 20133 | 23236 | Presser Foot Plate, for 20134 |
| 20134 | 23236 | Presser Foot (hinged) complete, for 3/16 in. to 1/4 in. gauges, for Collar and Cuff Work, Nos. 19223, 20133 and 26276 |
| 20155 | 23236 | Presser Foot Plate, for 20157 |
| 20156 | 23236 | " " Shank, for 20157 |
| 20157 | 23236 | Presser Foot (hinged) complete, Nos. 228J, 20155, 20156 and 62527 |
| 20159 | 18316 | Feed Dog, 16 teeth (16 teeth to the inch), for Shirt Work, for 20160 |
| 20160XC | 18316 | Throat Plate (large needle hole), for 20159, 143172 and 143173 |
| 20163 | 23231 | Feed Dog, 16 teeth (16 teeth to the inch), for 1/16 in. stitch, for 20123 |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|---------|-------|---|
| 20164 | 23219 | Feed Dog, 16 teeth (16 teeth to the inch) for 1/8 in. stitch, for 20123 and 52190, for Collar and Cuff Work |
| 20343 | 23236 | Presser Foot with guide on bottom to the right of needle hole |
| 20356XC | 23222 | Throat Plate (large needle hole), for 121446 |
| 20357XC | ----- | Throat Plate (small needle hole), for 121446 |
| 20360 | 23236 | Presser Foot Plate, for 20361 |
| 20361 | 23236 | Presser Foot (hinged) plain bottom, complete, Nos. 7298, 19335 and 20360 |
| 20458 | 23225 | Presser Foot |
| 23263 | 18373 | Tape Reel Arm Steady Pin, for 121412 |
| 24544 | 23221 | Presser Foot Plate, for 24983 |
| 24982 | 23221 | " " Shank, for 24983 |
| 24983 | 23221 | Presser Foot (spring Hinged) complete, Nos. 24544, 24982, 26231 and 62527 |
| 25128 | 18313 | Puller Feed Driving Belt Hook, for 225190 |
| 25721 | 23226 | Binder Folder, for 26250 |
| 25722 | 23226 | " Ribbon Tension, for 26250 |
| 25878 | 18310 | Guide |
| 25983 | 23226 | Presser Foot, for 26250 |
| 26231 | 18364 | " " Spring, for 24983, 62927, 127234 and 259782 |
| 26250 | 23226 | Binder (English) complete, for gauges up to 9/16 in., Nos. 190D, 207F, 25721, 25722, 25983, 121444, 121445 and two 7071 |
| 26276 | 23236 | Presser Foot Hinge Pin for 20134, 44161 and 143168 |
| 26279 | 23236 | Presser Foot Extension, 1/16 inch |
| 26280 | 23236 | " " " 1/8 inch |
| 26281 | 23236 | " " " 1/4 inch |
| 26282 | 23236 | " " " 3/8 inch |
| 26283 | 23236 | " " " 1/2 inch |
| 26603 | 23228 | Feed Dog, 20 teeth (16 teeth to the inch), for 26605, 26606 and 270130 |
| 26605XC | 23228 | Throat Plate (large needle hole), for 26603 |
| 26606XC | ----- | Throat Plate (small needle hole), for 26603 |
| 26638 | 18372 | Presser Foot (double toe), for gathering |
| 26682 | 18360 | Guide (combination) |
| 26795 | 23228 | Corder Cord Guide, for 120207 |
| 26796 | 23228 | " " " Arm, for 120207 |
| 27739 | 18362 | Thread Unwinder Thread Cone (wood) |
| 27878 | 18361 | Machine Rest Rivet, for 79626 and 79627 |
| 28334 | 18359 | Binder Folder, for 28776 |
| 28337 | 18359 | " Ribbon Tension, for 28776 |
| 28627 | 23232 | Hemmer on Shank, for 1/8 in. to 5/8 in. gauges |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|---------|-------|--|
| 28628 | 23232 | Presser Foot, for 3/8 in. to 5/8 in. gauges |
| 28676 | 18359 | Presser Foot, for 28776 |
| 28725 | 18372 | " " Spring Guide, for 28726 |
| 28726 | 18372 | " " (right hand spring guide) with 665J and 28725, for 1/32 in. to 1/4 in. gauges |
| 28775XC | 18359 | Throat Plate, for 28776 |
| 28776 | 18359 | Binder (English) complete, for heavy work, Nos. 193D, 7071, 12370, 28334, 28337, 28676, 28775 and two 235J |
| 32572 | 18380 | Tension Releasing Disc, for 270087 |
| 33887 | 18361 | Machine Hinge Plate, for 150962 |
| | | Nos. 35002 to 35006, for 35137 |
| 35002 | 18359 | Presser Foot Extension |
| 35003 | 18359 | " " Graduated Adjustable Guide (long, left) |
| 35004 | 18359 | Presser Foot Graduated Adjustable Guide (long, right) |
| 35005 | 18359 | Presser Foot Graduated Adjustable Guide (short, right) |
| 35006 | 18359 | Presser Foot Graduated Adjustable Guide (short, right) flush |
| | | Nos. 35134 to 35136, for 35137 |
| 35134 | 18359 | Presser Foot with 36696 |
| 35135 | 18359 | " " Graduated Adjustable Guide Clamp |
| 35136 | 18359 | Presser Foot Graduated Adjustable Guide Clamp Lever |
| 35137 | 18359 | Presser Foot with Extension and Graduated Adjustable Guides complete, Nos. 337B, 35002 to 35006 and 35134 to 35136 |
| 35208 | 23228 | Binder on Shank to turn in both edges, for bias or straight binding, for skirts, wrappers, shirt waists, etc |
| 35236 | 23231 | Hemmer on Shank, for 7/16 in. hem |
| 35245 | 18315 | Piping Attachment complete, for piping house dresses, Nos. 1443J and 120977 |
| 35511 | 18343 | Tucker Space Guide Indicator, for 259530 |
| 35511 | 18343 | Tucker Tuck Guide Indicator, for 36394 |
| 35512 | 18343 | " Space Guide Pin, for 259529 |
| 35513 | 18343 | " " " Stop (left), for 259530 |
| 35514 | 18343 | Tucker Space Guide Stop (left) Guide Pin, for 259529 |
| 35515 | 18343 | Tucker Space Guide Stop (right), for 259530 |
| 35517 | 18343 | Tucker Tuck Guide Arm, for 36394 |
| 35518 | 18343 | " " " Base, for 36394 |
| 35524 | 18343 | " " " Frame Spring Washer, for 36394 |
| 35525 | 18343 | Tucker Tuck Guide Plate, for 36394 |
| 35528 | 23236 | Presser Foot (wide) |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|-------|-------|--|
| 35540 | 23231 | Hemmer on Shank complete with right hand lower guide, for lace, Nos. 1443B, 35926, 35927 and two 590D |
| 35610 | 23229 | Binder Washer, for 121737 |
| 35682 | 23230 | Hemmer (foot), for 1/8 in. hem, with guide on bottom to the right of needle hole |
| 35710 | 23230 | Hemmer (foot), for 3/32 in. hem, with guide on bottom to the right of needle hole |
| 35926 | 23231 | Hemmer, for 35540 |
| 35927 | 23231 | " Shank, for 35540 |
| 35997 | 23230 | " (foot), for 3/16 in. hem, with guide on bottom to the right of needle hole |
| 36072 | 23230 | Hemmer (foot), for 1/4 in. hem, with guide on bottom to the right of needle hole |
| 36122 | 23230 | Hemmer (foot), for 7/32 in. hem |
| 36309 | 23230 | " " " " " " with guide on bottom to the right of needle hole |
| 36387 | 18343 | Tucker Space Guide, for 259530 |
| 36389 | 18343 | Nos. 36389 to 36393, for 36394 |
| 36390 | 18343 | Tucker Tuck Guide Bracket |
| 36391 | 18343 | " " " " " Spring |
| 36392 | 18343 | " " " " " Plate |
| 36393 | 18343 | " " " " " Frame |
| 36394 | 18343 | " " " " " Spring |
| | | Tucker Tuck Guide complete, for 259532, Nos. 9D, 423C, 803C, 1510E, 35511, 35517, 35518, 35524, 35525, 36389 to 36393, 50134E, two each 1115F, 1177J, 1520J, 56814 and three wood screws 1-1/4 in., No. 10 |
| 36413 | 23230 | Hemmer (foot), plain bottom, for 1/16 in. hem |
| 36414 | 23230 | Hemmer (foot), plain bottom, for 3/32 in. hem |
| 36416 | 23230 | Hemmer (foot), plain bottom, for 3/16 in. hem |
| 36464 | 23236 | Presser Foot Spring Guide, for 36465 |
| 36465 | 23236 | " " (right hand spring guide) with 665J and 36464, for 1/32 in. to 5/16 in. gauges |
| 36480 | 23230 | Hemmer (foot), plain bottom, for 5/32 in. hem |
| 36524 | 23230 | Hemmer (foot), for 5/32 in. hem with guide on bottom to the right of needle hole |
| 36574 | 23224 | Presser Foot, for 36575 |
| 36575 | 23224 | " " 36574 with 36576 and two 50202J |
| 36576 | 23224 | Presser Foot Finger Guard, for 36575 |
| 36654 | 23236 | " " , for tucking shirt bosoms |
| 36696 | 18359 | " " Graduated Adjustable Guide Clamp Steady Pin, for 35134 |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|---------|-------|---|
| 36714 | 23236 | Presser Foot with 233D, for 36717 |
| 36715 | 23236 | " " Guide (right) with 36716, for 36717 |
| 36716 | 23236 | Presser Foot Guide Stud, for 36715 |
| 36717 | 23236 | " " complete with Adjustable Guide (right), Nos. 36714 and 36715 |
| 36773 | 23236 | Presser Foot, for braiding |
| 40315 | 23236 | " " " long stitch, for general work |
| 40316 | 23231 | Presser Foot Plate, for 40318 |
| 40317 | 23231 | " " Shank, for 40318 |
| 40318 | 23231 | Presser Foot (hinged) complete, for lace running, Nos. 40316, 40317 and 62527 |
| 40322 | 23236 | Presser Foot (narrow) |
| 40392 | 18379 | Rotating Hook Bobbin Case Latch, for 40393 |
| 40393 | 18379 | Rotating Hook Bobbin Case Hinge Nos. 2974, 40392, and 125320, for 52237 |
| 40394 | 18379 | Rotating Hook Bobbin Case Tension Spring, for 52236 |
| 41400 | 18310 | Machine Rest Pin (wood) |
| 43525 | 22919 | Binder Steady Pin, for 121398 |
| 44136 | 23225 | Feed Dog, 15 teeth (16 teeth to the inch), for 44137 |
| 44137XC | 23225 | Throat Plate (large needle hole), for 44136 |
| 44158 | 23222 | Feed Dog, 15 teeth (14 teeth to the inch), for 44162 |
| 44159 | 23222 | Presser Foot Plate, for 44161 |
| 44160 | 23222 | " " Shank, for 44161 |
| 44161 | 23222 | Presser Foot (hinged) complete, Nos. 26276, 44159 and 44160 |
| 44162XC | 23222 | Throat Plate, for 44158 |
| 44243 | 18361 | Machine Hinge Connection, for 150962 |
| 44252 | 23224 | Feed Dog, 12 teeth (12 teeth to the inch), for 44255, 44256 and 270129 |
| 44253 | 18315 | Feed Dog, 16 teeth (16 teeth to the inch), for 44255, 44256 and 270129 |
| 44255XC | ----- | Throat Plate (small needle hole), for 44252 and 44253 |
| 44256XC | 18315 | Throat Plate (large needle hole), for 44252 and 44253 |
| 50053W | 18343 | Tucker Space Guide Thumb Screw, for 259530 |
| 50117E | 18364 | Feed Dog, Screw |
| 50134E | 18343 | Tucker Tuck Guide Base Screw Stud, for 36394 |
| 50190W | 18381 | Attachment Thumb Screw |
| 50202J | 23224 | Presser Foot Finger Guard Screw, for 36575 |
| 50304C | 18380 | Tension Stud, for 52098 |
| 50305C | 18380 | " " Set Screw, for 52083 |
| 51097J | 22919 | Binder Thumb Screw, for 121168 |
| 51097J | 22919 | Tape Reel Arm Thumb Screw, for 121168 |
| 51220AL | 18347 | Feed Bar Body Adjusting Screw, for 143185 |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|---------|-------|---|
| 52018 | 18379 | Rotating Hook Bobbin Case Holder Position Bracket |
| 52031 | 18364 | Feed Dog, 19 teeth (22 teeth to the inch), for 52032, 52033 and 143772 |
| 52032XC | 18364 | Throat Plate (large needle hole), for 52031 |
| 52033XC | 18364 | Throat Plate (small needle hole), for 52031 |
| 52055 | 23228 | Presser Foot |
| 52056 | 18315 | " " |
| 52082 | 18380 | Thread Take-up Spring, for 270087 |
| 52083 | 18380 | " " " " Regulator with 50305C, for 270087 |
| 52098 | 18380 | Tension Stud 50304C with 1560C, for 270087 |
| 52188 | 23219 | Presser Foot (solid), for Cuff Work |
| 52189 | 23219 | " " " " Collar Work |
| 52190XC | 23219 | Throat Plate, for 20164 |
| 52235 | 18379 | Rotating Hook Bobbin Case, for 52236 |
| 52236 | 18379 | " " " " 52235 with 591F, 1380E and 40394, for 52237 |
| 52237 | 18379 | Rotating Hook Bobbin Case complete, Nos. 592E, 2975, 40393 and 52236, for 270871 and 270873 |
| 52266 | 18383 | Feed Bar Slide Block, for 52267 |
| 52267 | 18383 | " " " " 52266 with 125060, for 270024 |
| 52390 | 23221 | Presser Foot Shank, for 127234 |
| 52462 | 23226 | Feed Dog, 19 teeth (22 teeth to the inch), for 52463 |
| 52463XC | 23226 | Throat Plate, for 52462 |
| 52544 | 23220 | Presser Foot Spring, for 143168 |
| 56814 | 18343 | Tucker Tuck Guide Bracket Screw Center 307C with 1513J, for 36394 |
| 60913 | 18362 | Thread Unwinder Spool Weight with 60914 |
| 60914 | 18362 | Thread Unwinder Spool Weight Center Pin, for 60913 |
| 62527 | 18364 | Presser Foot Hinge Pin, for 20157, 24983, 40318, 62927, 127234 and 142059 |
| 62925 | 18364 | Presser Foot Plate, for 62927 |
| 62926 | 18364 | " " Shank, for 62927 |
| 62927 | 18364 | Presser Foot (spring hinged) complete, Nos. 26231, 62527, 62925 and 62926 |
| 79626 | 18361 | Bench Stand Section (front) with wood screw 1-1/2 in., No. 12, two each 20022, 27878 and wood screws 3-1/2 in., No. 14, for 79628 |
| 79627 | 18361 | Bench Stand Section (back) with two each 20022, 27878, 150962 and wood screws 3-1/2 in., No. 14, for 79628 |
| 79628 | 18361 | Bench Stand (Sectional) complete, Nos. 79626 and 79627 |
| 120143 | 18315 | Presser Foot Plate, for 120144 |
| 120144 | 18315 | Presser Foot (hinged) complete, for Button Stays, Nos. 7298, 19335 and 120143 |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|----------|-------|--|
| 120206 | 23228 | Corder Cord Guide Rod with 457AL, for 120207 |
| 120207 | 23228 | Corder (adjustable) complete, for short turns on cushions, Nos. 190B, 1044D, 26795, 26796, and 120206 |
| 120208 | 23228 | Presser Foot (grooved) |
| 120342 | 18310 | Oilier (copper plated) with 120343 |
| 120343 | 18310 | " Spout (3-1/2 in. long), for 120342 |
| 120367 | 23232 | Hammer on Shank, for handkerchief work |
| 120479 | 18359 | Quilter Guide (left), for 120485 |
| 120480 | 18359 | " " (right), for 120485 |
| 120481 | 18359 | " " Bracket, for 120482 |
| 120482 | 18359 | " " " " 120481 with 120483 and two 203AL, for 120485 |
| 120483 | 18359 | Quilter Guide Disengaging Sleeve, for 120482 |
| 120484 | 18359 | Quilter Guide Disengaging Sleeve Spring, for 120485 |
| 120485 | 18359 | Quilter complete, Nos. 602D, 120479, 120480, 120482 and 120484 |
| 120536 | 18373 | Tape Reel Disc with 120538 and 120539, for 121168, 121737 and 259784 |
| 120537 | 18373 | Tape Reel Disc Pin, for 121412 |
| 120538 | 18373 | " " " Stud (wood), for 120536 |
| 120539 | 18373 | " " " Sleeve (brass), for 120536 |
| 120740 | 23229 | Tape Reel Pin, for 121737 |
| 120803 | 23230 | Hammer (foot), for 1/8 in. hem |
| 120804 | 23230 | " " " 5/32 in. hem |
| 120805 | 23230 | " " " 3/16 in. hem |
| 120806 | 23230 | " " " 1/4 in. hem |
| 120807 | 23230 | " " " 5/16 in. hem |
| 120828 | 23236 | Presser Foot (single toe), for gathering, for fine work |
| 120837 | 23230 | Hammer (foot), plain bottom, for 1/8 in. hem, slotted for lace |
| 120898 | 23230 | Hammer (foot), for 1/16 in. to 1/8 in. hem, for China Silk, etc. |
| 120911 | 23230 | Hammer (foot), for 5/32 in. to 1/4 in. hem, for China Silk, etc. |
| 120938 | 23230 | Hammer (foot), for 3/32 in. hem |
| 120977 | 18315 | Piping Attachment, for 35245 |
| 120991 | 23232 | Hammer on Shank, for 1/16 in. to 1/4 in. hem |
| 121167 | 22919 | Binder Folder on Shank, for 121168 |
| 121168 | 22919 | Binder (transverse) on Shank complete, for folded or unfolded bias binding (with tape reel), for general work, for 3/4 in., 7/8 in. and 1 in. tape, Nos. 3146, 120536, 121167, 121169, 121397, 121398, 121412 and two 51097J |
| 121169 | 22919 | Presser Foot, for 121168 and 121737 |
| 121397 | 22919 | Feed Dog, 18 teeth (16 teeth to the inch), for 121168 |
| 121398XC | 22919 | Throat Plate with 43525, for 121168 |
| 121412 | 18373 | Tape Reel Arm with 8879, 23263 and 120537, for 121168 and 259784 |

| No. | Plate | Name |
|----------|-------|--|
| 121444 | 23226 | Feed Dog, 13 teeth (16 teeth to the inch), for 26250 |
| 121445XC | 23226 | Throat Plate, for 26250 |
| 121446 | 23228 | Feed Dog, spiked teeth, 13 teeth (10 teeth to the inch), for 20356, 20357, 121447 and 270128 |
| 121447XC | 23228 | Throat Plate, for 121446 |
| 121646 | 23219 | Feed Dog, 12 teeth (16 teeth to the inch), for Collar Work (second stitching), for 121649 |
| 121647 | 23219 | Presser Foot with 121648 and two 337J, for 3/16 in., 7/32 in., 1/4 in., 9/32 in. and 5/16 in. gauges, for Collar Work (second stitching) |
| 121648 | 23219 | Presser Foot Edge Guide, for 3/16 in., 7/32 in., 1/4 in., 9/32 in. and 5/16 in. gauges, for 121647 |
| 121649XC | 23219 | Throat Plate, for 121646 |
| 121653 | 18315 | Hemmer on Shank, for 9/16 in. hem, for Button Stays on Shirts |
| 121655 | 23225 | Binder on Shank, for Facing Sleeve Plackets, for 121656 |
| 121656 | 23225 | Presser Foot, for Facing Sleeve Plackets, for 121655 |
| 121658 | 23226 | Edge Folder with Edge Guide on Shank, for Yoking |
| 121659 | 23226 | Presser Foot Plate, for 121660 |
| 121660 | 23226 | Presser Foot (hinged) complete, for Yoking, Nos. 7298, 19223, and 121659 |
| 121662 | 23224 | Joining Attachment with 121844, for Shoulder Joining, for 121663 |
| 121663 | 23224 | Presser Foot, for Shoulder Joining, for 121662 |
| 121732 | 23229 | Binder (transverse), for 121737 |
| 121733 | 23229 | " Throw-out Arm with 192349, for 121737 |
| 121734 | 23229 | Binder Throw-out Arm Bracket Rivet, for 121938 |
| 121735 | 23229 | Binder Releasing Lever, for 121737 |
| 121736 | 23229 | " " " Spring, for 121737 |
| 121737 | 23229 | Binder (transverse) with Throw-out Arm complete, for folded or unfolded bias binding (with tape reel), for general work, for 3/4 in., 7/8 in. and 1 in. tape, Nos. 724F, 940F, 35610, 120536, 120740, 121169, 121732, 121733, 121735, 121736, 121738, 121938XC and two 1443J |
| 121738 | 23229 | Feed Dog, 17 teeth (16 teeth to the inch), for 121737 |
| 121758 | 23230 | Feed Dog, 13 teeth (16 teeth to the inch), for Hemming Shirts, for 121759 |
| 121759XC | 23230 | Throat Plate (large needle hole), for Hemming Shirts, for 121758 |
| 121760 | 23230 | Hemmer (foot), for 1/8 in. hem, for Hemming Shirts, for 121758 and 121759 |

| No. | Plate | Name |
|----------|-------|--|
| 121761 | 23230 | Hemmer (foot), with 121981, for 1/8 in. hem, for Hemming Shirts |
| 121762 | 23230 | Hemmer (foot), with 121981, for 5/32 in. hem, for Hemming Shirts |
| 121763 | 23236 | Presser Foot with 121981 with Hemmer with Yielding Top Scroll |
| 121844 | ----- | Joining Attachment Shank, for 121662 |
| 121938XC | 23229 | Throat Plate with two 121734, for 121737 |
| 121944 | 18360 | Presser Foot Shank, for 142059 |
| 121945 | 18360 | Presser Foot Spring, for 142059 |
| 121981 | ----- | Hemmer Tongue, for 121761, 121762 and 121763 |
| *125060 | 18383 | Feed Bar Slide Block Stud, for 52267 |
| 125320 | 18379 | Rotating Hook Bobbin Case Latch Lever, for 40393 |
| 127087 | 23221 | Feed Dog, 19 teeth (16 teeth to the inch), for 127106, 127107 and 270127 |
| 127106XC | 23221 | Throat Plate (large needle hole), for 127087 |
| 127107XC | ----- | Throat Plate (small needle hole), for 127087 |
| 127229 | 23221 | Feed Dog, 17 teeth (14 teeth to the inch), for 127238 |
| 127233 | 23221 | Presser Foot Plate, for 127234 |
| 127234 | 23221 | Presser Foot (spring hinged) complete, Nos. 26231, 52390, 62527 and 127233 |
| 127238XC | 23221 | Throat Plate, for 127229 |
| | | Nos. 127257 to 127259, for 127260 |
| 127257 | 23221 | Presser Foot Plate |
| 127258 | 23221 | " " Shank with 665J |
| 127259 | 23221 | " " Thread Cutter |
| 127260 | 23221 | Presser Foot (hinged) complete with Thread Cutter, Nos. 239E, 127257 to 127259 and 131256 |
| 131256 | 23221 | Presser Foot Hinge Pin, for 127260 |
| 142057 | 18360 | Feed Dog, 21 teeth (22 teeth to the inch), for Shirt Work, for 142060 and 142061 |
| 142058 | 18360 | Presser Foot Plate, for 142059 |
| 142059 | 18360 | Presser Foot (spring hinged) complete, for Shirt Work, Nos. 62527, 121944, 121945 and 142058 |
| 142060 | 18360 | Throat Plate (small needle hole), for Shirt Work, for 142057 and 142062 |
| 142061 | 18374 | Throat Plate (large needle hole), for Shirt Work, for 142057 and 142062 |
| 142062 | 18374 | Feed Dog, 17 teeth (18 teeth to the inch), for general and shirt work, for 142060 and 142061 |
| 143030 | 18383 | Feed Bar |
| 143165 | 23220 | Feed Dog, 18 teeth (14 teeth to the inch), for Curtain Work, for 143169 |
| 143166 | 23220 | Presser Foot Plate, for 143168 |
| 143167 | 23220 | " " Shank, for 143168 |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|----------|-------|---|
| 143168 | 23220 | Presser Foot (spring hinged) complete, for Curtain Work, Nos. 26276, 52544, 143166 and 143167 |
| 143169XC | 23220 | Throat Plate (large needle hole) for Curtain Work, for 143165 |
| 143170 | 23222 | Feed Dog, 16 teeth (16 teeth to the inch), for Shirt Work, for 143171 |
| 143171XC | 23222 | Throat Plate (large needle hole), for Shirt Work, for 143170 |
| 143172 | 18316 | Feed Dog, 18 teeth (18 teeth to the inch), for Shirt Work, for 20160 |
| 143173 | 18316 | Feed Dog, 20 teeth (20 teeth to the inch), for Shirt Work, for 20160 |
| 143174 | 23220 | Feed Dog, 17 teeth (14 teeth to the inch), for General Work, for 143175 |
| 143175XC | 23220 | Throat Plate (large needle hole), for General Work, for 143174 |
| 143185 | 18347 | Feed Bar Body with two each 1607C and 51220AL, for 143187 |
| 143186 | 18347 | Feed Bar Shank, for 143187 |
| 143187 | 18347 | Feed Bar (tilting adjustable) complete, Nos. 704C, 143185 and 143186 |
| 143209 | 18372 | Presser Foot Shank, for 143215 |
| 143213 | 18372 | Presser Foot Plate, for 143215 |
| 143215 | 18372 | Presser Foot (hinged) long toes, with left hand Yielding Plate complete, Nos. 18055, 143209, 143213, 143317 and 143320 |
| 143216 | 18372 | Presser Foot Plate, for 143219 |
| 143217 | 18372 | " " Shank, for 143219 |
| 143219 | 18372 | Presser Foot (hinged) long toes, with right hand Yielding Plate complete, Nos. 18055, 143216, 143217, 143318 and 143320 |
| 143272XC | 18364 | Throat Plate (medium needle hole), for 52031 |
| 143301 | 18379 | Rotating Hook Oil Wick (felt), for 270868 |
| 143317 | 18372 | Presser Foot Yielding Plate, for 143215 |
| 143318 | 18372 | " " " " " 143219 |
| 143320 | 18372 | " " " " Spring, for 143215 and 143219 |
| 143349 | 18382 | Rotating Hook Shaft Oil Filter Wick Holder, for 270176 |
| 150203 | 18362 | Thread Unwinder Spool Rest Cushion (felt), for 225258 |
| 150962 | 18361 | Machine Hinge complete, Nos. 2809, 33887, 44243 and wood screw 1 in., No. 14, F.H. blacked, for 79627 |
| 192549 | 23229 | Binder Releasing Lever Spring Position Stud, for 121733 |
| 200004E | 18381 | Arm Screw (short) |
| 200040E | 18383 | Feed Driving Connection Crank Pinch Screw, for 270805 |
| 200040E | 18383 | Feed Lifting Connection Crank Pinch Screw, for 270015 |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|----------|-------|--|
| 200040E | 18383 | Stitch Regulating Shaft Crank Pinch Screw, for 270822 |
| 200041X | 18381 | Arm Cover Plate Screw |
| 200041X | 18381 | Rotating Hook Oil Reservoir Cover Screw |
| 200043C | 18383 | Stitch Regulating Shaft Bushing Set Screw |
| 200054E | 18306 | Needle Bar Connecting Link Guide Block Screw |
| 200056E | 18312 | Bobbin Winder Stop Latch Screw, for 259431 and 259462 |
| 200070C | 18382 | Rotating Hook Driving Shaft Connection Belt Pulley Set Screw, for 270169 |
| 200077D | 18379 | Rotating Hook Bobbin Case Holder Position Bracket Screw |
| 200082D | 18312 | Bobbin Winder Tension Bracket Screw, for 259431 and 259462 |
| 200086C | 18306 | Needle Bar Connecting Stud Pinch Screw, for 270057 |
| 200095B | 18313 | Puller Feed Driving Pinion Cap Screw, for 259474 |
| 200113F | 18312 | Bobbin Winder Brake Clamp Screw, for 259431 and 259462 |
| 200126F | 18373 | Binder Screw, for 259784 |
| 200132E | 18306 | Tension Releaser Screw |
| 200196E | 18306 | Thread Pull-off Set Screw, for 270063 |
| 200293C | 18306 | Knee Lifter Lifting Link Hinge Screw |
| 200299H | 18312 | Bobbin Winder Stop Latch Trip Lever Hinge Screw, for 259431 and 259462 |
| 200333C | 18371 | Needle Bar Crank Position Screw, for 270177 |
| 200347C | 18311 | Knee Lifter Rock Lever Stop Stud Set Screw, for 228486 |
| 200355H | 18380 | Thread Retainer Set Screw |
| 200362C | 18375 | Belt Guard Set Screw, for 270152 |
| 200362C | 18382 | Rotating Hook Driving Shaft Bushing Set Screw |
| 200363AL | 18371 | Arm Shaft Connection Belt Pulley Set Screw, for 270168 |
| 200364C | 18313 | Puller Feed Driving Pulley Shaft Set Screw, for 259467 |
| 200364C | 18313 | Puller Feed Roll and Shaft (lower) Extension Set Screw, for 295471 |
| 200373C | 18313 | Puller Feed Driving Pulley Set Screw, for 259468 |
| 200374C | 18371 | Needle Bar Connecting Link Hinge Stud Set Screw, for 270099 |
| 200378C | 18371 | Needle Bar Crank Position Screw Check Screw, for 270177 |
| 200380C | 18312 | Bobbin Winder Pulley Set Screw, for 225368 and 259461 |
| 200382C | 18382 | Feed Driving Eccentric Set Screw, for 270809 |
| 200382C | 18382 | Feed Lifting Eccentric Set Screw, for 270023 |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|----------|-------|---|
| 200382C | 18313 | Puller Feed Driving Gear Set Screw, for 237751 |
| 200382C | 18378 | Rotary Take-up (small) Driving Shaft Pulley Set Screw, for 270072 |
| 200382C | 18382 | Rotating Hook Driving Shaft Gear Set Screw, for 270035 |
| 200383C | 18362 | Thread Unwinder Spool Rest Rod Set Screw, for 259658 |
| 200394C | 18383 | Feed Bar Center Set Screw, for 270021 |
| 200394C | 18383 | Feed Driving Connection Link Hinge Pin Set Screw |
| 200394C | 18313 | Puller Feed Roll and Shaft Gear Set Screw, for 259063 |
| 200394C | 18383 | Stitch Regulating Shaft Crank Hinge Stud Set Screw, for 270824 |
| 200427C | 18381 | Knee Lifter Lifting Link Connection Set Screw, for 270049 |
| 200434C | 18381 | Knee Lifter Lifting Rod Connection Set Screw, for 270049 |
| 200529C | 18311 | Knee Lifter Rock Lever Rod Set Screw, for 228370 |
| 200545C | 18383 | Feed Lifting Connection Hinge Screw |
| 200567H | 18380 | Thread Severing Finger Screw |
| 200650H | 18383 | Stitch Regulating Lever Hinge Screw |
| 200710 | 18313 | Puller Feed Base Bolt, for 259474 |
| 200902D | 18313 | " " Roll and Shaft (upper) Bearing Screw, for 259467 |
| 200996C | 18383 | Stitch Regulating Lever Stop Block Screw, for 270829 |
| 201018C | 18362 | Thread Unwinder Spool Rest Set Screw, for 225257 |
| 201188C | 18313 | Puller Feed Driving Pulley Shaft Collar Set Screw, for 259470 |
| 201188C | 18313 | Puller Feed Roll and Shaft (lower) Collar Set Screw, for 259470 |
| 201215D | 18382 | Rotating Hook Shaft End Bearing Screw, for 270166 |
| 201220C | 18382 | Feed Driving Eccentric Position Screw, for 270809 |
| 201220C | 18382 | Feed Lifting Eccentric Position Screw, for 270023 |
| 201220C | 18313 | Puller Feed Driving Gear Position Screw, for 237751 |
| 201220C | 18382 | Rotating Hook Driving Shaft Gear Position Screw, for 270035 |
| 201346AL | 18371 | Balance Wheel Set Screw, for 259463, 259465, 270187 and 270189 |
| 201499H | 18312 | Bobbin Winder Tension Stud, for 225461 |
| 201520H | 18383 | Stitch Regulating Lever Connection Hinge Screw Nut |
| 201522E | 18383 | Feed Lifting Connection Hinge Screw Nut |
| 201524E | 18383 | Stitch Regulating Shaft Bushing Set Screw Nut |
| 201525E | 18343 | Tucker Space Guide Base Hinge Screw Nut, for 259529 |
| 201531E | 18383 | Feed Driving Connection Crank Hinge Screw Nut |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|---------|-------|--|
| 201572H | 18312 | Bobbin Winder Tension Stud Thumb Nut, for 225462 |
| 201696H | 18362 | Thread Unwinder Thread Guide Lock Nut, for 225258 |
| 202005 | 18381 | Arm Screw Washer |
| 202090 | 18373 | Presser Foot Hinge Pin, for 259782 |
| 202248 | 18383 | Stitch Regulating Adjusting Screw Washer |
| 202277 | 18312 | Bobbin Winder Frame Oil Packing (wick), for 225453 |
| 202330 | 18306 | Needle Bar Connecting Stud Oil Packing (wick), for 270057 |
| 202423 | 18382 | Rotating Hook Shaft Oil Filter Wick, for 270176 |
| 202478 | 18312 | Bobbin Winder Stop Latch Trip Lever, for 259431 and 259462 |
| 202603 | 18373 | Binder Screw Washer, for 259784 |
| 204020 | 18383 | Stitch Regulating Lever Cushion (leather), for 270819 |
| 204235 | 18381 | Arm Position Pin |
| 205796 | 18313 | Puller Feed Roll and Shaft (upper) Bearing Spring, for 259467 |
| 214206 | 18371 | Arm Shaft Connection Belt Pulley Spring Flange, for 270168 |
| 214206 | 18382 | Rotating Hook Driving Shaft Connection Belt Pulley Spring Flange, for 270169 |
| 222598 | 18306 | Needle Bar Connecting Link Hinge Stud Oil Packing (wick), for 270143 |
| 222598 | 18382 | Rotating Hook Driving Shaft Bushing Oil Packing (wick), for 271062 |
| 225190 | 18313 | Puller Feed Driving Belt, size 1/4 in. diam., length 39-1/2 in., with 25128, for 259474 |
| 225257 | 18362 | Thread Unwinder Spool Rest (for two spools) (flat) with 201018C, for 225258 |
| 225258 | 18362 | Thread Unwinder (for two spools) complete, Nos. 201696H, 225257, 225324, 225326, 225388, 259658, two each 150203, 225391 and three wood screws 7/8 in., No. 12 |
| 225322 | 18362 | Thread Unwinder Thread Guide Rod Washer, for 225324 |
| 225324 | 18362 | Thread Unwinder Thread Guide Rod with 208AL and 225322, for 225258 |
| 225326 | 18362 | Thread Unwinder Thread Guide Position Cup, for 225258 |
| 225368 | 18312 | Bobbin Winder Pulley with 200380C, for 259431 |
| 225377 | 18362 | Thread Unwinder Spool Wire, for small spools |
| 225381 | 18312 | Bobbin Winder Spindle, for 259431 and 259462 |
| 225388 | 18362 | Thread Unwinder Spool Rest Rod, for 225258 |

| No. | Plate | Name |
|---------|-------|---|
| 225390 | 18362 | Thread Unwinder Thread Cone Holder |
| 225391 | 18362 | " " " Guide, for |
| | | 225258 |
| 225421 | 18316 | Hammer (foot), for 3/32 in. hem |
| 225422 | 18316 | " " " 5/32 in. hem |
| 225423 | 18316 | " " " 5/64 in. hem |
| 225424 | 18316 | " " " 1/8 in. hem |
| 225425 | 18316 | " " " 9/64 in. hem |
| 225426 | 18316 | " " " 3/16 in. hem |
| 225427 | 18316 | " " " 7/32 in. hem |
| 225428 | 18316 | " " " 1/4 in. hem |
| 225434 | 18316 | Bobbin Holder |
| 225444 | 18312 | " Winder Stop Latch, for 259431 and 259462 |
| | | Nos. 225453 to 225456, for 259431 and 259462 |
| 225453 | 18312 | Bobbin Winder Frame with 202277 and 259660 |
| 225454 | 18312 | Bobbin Winder Frame Hinge Pin |
| 225455 | 18312 | " " " Spring |
| 225456 | 18312 | " " " " Plunger |
| 225458 | 18312 | " " " Stop Latch Thumb Lever, for 259431 and 259462 |
| 225459 | 18312 | Bobbin Winder Stop Latch Thumb Lever Hinge Stud, for 259431 and 259462 |
| 225459 | 18312 | Bobbin Winder Stop Latch Thumb Lever Joint Stud, for 259431 and 259462 |
| 225461 | 18312 | Bobbin Winder Tension Bracket with 201499H, for 225462 |
| 225462 | 18312 | Bobbin Winder Tension Bracket complete, Nos. 13710, 201572H, 225461 and two 2102, for 259431 and 259462 |
| 225604H | 18373 | Binder Bracket Thumb Screw Washer, for 259784 |
| 225708 | 18343 | Tucker Space Guide Base Spring, for 259529 |
| *227785 | ----- | Auxiliary Knee Lifter Rock Lever Rod Cap, for 228395 |
| 228026 | 18312 | Bobbin Winder Tension Bracket Screw Washer, for 259431 and 259462 |
| 228359 | 18311 | Knee Lifter Rock Lever with two 350231C, for 228361 |
| 228361 | 18311 | Knee Lifter Rock Lever Bracket 228486 with 228359, 228363, 228367, 228386 and 228455, for 228371 |
| 228363 | 18311 | Knee Lifter Rock Lever Hinge Pin, for 228361 |
| 228364 | 18311 | Knee Lifter Rock Lever Knee Plate with 350231C, for 228371 |
| 228365 | 18311 | Knee Lifter Rock Lever Rod, for 228371 |
| 228367 | 18311 | " " " " Stop Stud, for 228361 |
| 228370 | 18311 | Knee Lifter Rock Lever Extension with 200529C, for 228371 |
| 228371 | 18311 | Knee Lifter Rock Lever complete, Nos. 228361, 228364, 228365, 228370 and 228388 |

| No. | Plate | Name |
|---------|-------|--|
| 228372 | 18311 | Drip Pan, with four 3/4 in. wire nails |
| 228386 | 18311 | Knee Lifter Rock Lever Spring, for 228361 |
| 228388 | 18311 | Knee Lifter Rock Lever Knee Plate Arm, for 228371 |
| 228394 | 18347 | Spool Pin |
| 228395 | 18361 | Auxiliary Knee Lifter Rock Lever Rod with 227785 |
| 228396 | 18361 | Auxiliary Knee Lifter Rock Lever Rod Bracket |
| 228455 | 18311 | Knee Lifter Rock Lever Position Spring, for 228361 |
| 228486 | 18311 | Knee Lifter Rock Lever Bracket with 200347C and three wood screws 7/8 in., No. 12 |
| 232896 | 18362 | Thread Unwinder Spool Pin Arm Bracket with two 448AL |
| 235706 | 18383 | Feed Bar Oiling Wick, for 270139 |
| 236245 | 18380 | Thread Guide (lower) |
| 237751 | 18313 | Puller Feed Driving Gear with 200382C and 201220C, for 259474 |
| 250522 | 18310 | Screw Driver (for needle set screw) |
| 259055 | 18313 | Puller Feed Base Block (wood) (for use where attachment is not set into the table), for 259474 |
| 259057 | 18313 | Puller Feed Driving Pinion, for 259474 |
| *259061 | ----- | Puller Feed Roll and Shaft (upper) Bearing, for 259467 |
| 259063 | 18313 | Puller Feed Roll and Shaft Gear with 200394C, for 259474 |
| 259064 | 18313 | Puller Feed Work Guide (wood), for 259474 |
| | | Nos. 259370 to 259372, for 259373 |
| 259370 | 18362 | Thread Unwinder Spool Pin |
| 259371 | 18362 | " " " " Cap (bake-lite) |
| 259372 | 18362 | Thread Unwinder Spool Pin Washer |
| 259373 | 18362 | Thread Unwinder Spool Pin complete, Nos. 1010F and 259370 to 259372 |
| 259378 | 18362 | Thread Unwinder Spool Pin Arm with 217E and 259379 |
| 259379 | 18362 | Thread Unwinder Spool Pin Retaining Spring, for 259378 |
| | | Nos. 259428 to 259430, for 259431 |
| 259428 | 18312 | Bobbin Winder Brake (leather), also for 259462 |
| 259429 | 18312 | Bobbin Winder Brake Clamp, also for 259462 |
| 259430 | 18312 | Bobbin Winder and Tension Bracket Base |
| 259431 | 18312 | Universal Bobbin Winder complete, Nos. 200056E, 200082D, 200113F, 200299H, 202478, 225368, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428 to 259430, two each 225459 and wood screws 3/4 in., No. 12, R.H.B. |

NUMERICAL LIST OF PARTS

| No. | Plato | Name |
|--------|-------|--|
| 259461 | 18312 | Bobbin Winder Pulley with 200380C, for 259462 |
| 259462 | 18312 | Universal Bobbin Winder complete (for "V" belt drives), Nos. 200056E, 200082D, 200113F, 200299H, 202478, 225381, 225444, 225453 to 225456, 225458, 225462, 228026, 259428, 259429, 259461, 259662, two each 225459 and wood screws 3/4 in., No. 12, R.H.B. |
| 259463 | 18313 | Balance Wheel, belt grooves 2-1/8 and 1 in. diam., with 201346AL and 350107AL, for 259464 |
| 259464 | 18313 | Balance Wheel 259463 with 270004, for 259474 |
| 259465 | 18313 | Balance Wheel, belt grooves 2.9 in. outside diam. for 3/8 in. "V" belt and 1 in. bottom diam. for round belt, with 201346AL and 350107AL, for 259466 |
| 259466 | 18313 | Balance Wheel 259465 with 270004 Nos. 259467 to 259472, for 259474 |
| 259467 | 18313 | Puller Feed Base with 200364C, 259061, two each 200902D and 205796 |
| 259468 | 18313 | Puller Feed Driving Pulley (belt groove 4-1/4 in. diam.) with 200373C |
| 259469 | 18313 | Puller Feed Driving Pulley Shaft |
| 259470 | 18313 | " " " " " |
| | | Collar with 201188C |
| 259470 | 18313 | Puller Feed Roll and Shaft (lower) Collar with 201188C |
| 259471 | 18313 | Puller Feed Roll and Shaft (lower) with 200364C |
| 259472 | 18313 | Puller Feed Roll and Shaft (upper) |
| 259474 | 18313 | Puller Feed Device complete, Nos. 200095B, 225190, 237751, 259055, 259057, 259064, 259464, 259467 to 259469, 259471, 259472, two each 9842R, 200710, 259063 and 259470 |
| 259477 | 18310 | Screw Driver, 5 in. long |
| 259502 | 18359 | Finger Guard |
| 259529 | 18343 | Tucker Space Guide Base with 35512, 35514, 201525E, 225708, 350472H and two 1426E, for 259530 |
| 259530 | 18343 | Tucker Space Guide complete, Nos. 35511, 35513, 35515, 36387, 50053W, 259529, two each 1657D and 17718, for 259532 |
| 259532 | 18343 | Tucker (long arm) complete, Nos. 36394, 259530 and 259541 |
| 259541 | 18343 | Presser Foot, 50 needle hole, for 259532 |
| 259542 | 18343 | Presser Foot, 53 needle hole, 1/16 in. gauge to left of needle hole |
| 259543 | 18343 | Presser Foot, 53 needle hole, 3/32 in. gauge to left of needle hole |
| 259544 | 18343 | Presser Foot, 53 needle hole, 1/8 in. gauge to left of needle hole |

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|--------|-------|--|
| 259545 | 18343 | Presser Foot, 53 needle hole, 5/32 in. gauge to left of needle hole |
| 259658 | 18362 | Thread Unwinder Spool Stand with 200383C, for 225258 |
| 259660 | 18312 | Bobbin Winder Frame Oil Well Washer, for 225453 |
| 259662 | 18312 | Bobbin Winder and Tension Bracket Base, for 259462 |
| | | Nos. 259778 to 259780, for 259784 |
| 259778 | 18373 | Binder, for 7/8 in. binding |
| 259779 | 18373 | " Bracket |
| 259780 | 18373 | Feed Dog |
| 259781 | 18373 | Presser Foot Plate, for 259782 |
| 259782 | 18373 | Presser Foot (spring hinged) complete, Nos. 26231, 202090, 259781 and 270643, for 259784 |
| 259783 | 18373 | Throat Plate, for 259784 |
| 259784 | 18373 | Binder complete, for 7/8 in. bias binding, Nos. 207D, 120536, 121412, 200126F, 202603, 225604H, 259778 to 259780, 259782, 259783 and 350511D |
| 268258 | 18382 | Rotating Hook Shaft Bushing Oil Packing (wick), for 270166 |
| 270002 | 18381 | Arm Cover Plate (back) |
| 270004 | 18371 | Arm Shaft Ball Bearing (back), for 259464, 259466, 270188 and 270190 |
| 270005 | 18371 | Arm Shaft Ball Bearing (front), for 270177 |
| 270009 | 18381 | Bed Slide |
| 270010 | 18379 | Rotating Hook Bobbin |
| 270012 | 18383 | Feed Bar Center |
| 270015 | 18383 | Feed Lifting Connection Crank with 200040E |
| 270016 | 18383 | Feed Driving Connection Needle Bearing, for 270804 |
| 270016 | 18383 | Feed Lifting Connection Needle Bearing, for 270828 |
| 270021 | 18383 | Feed Driving Rock Shaft with two 200394C |
| 270022 | 18383 | Feed Driving Rock Shaft Center |
| 270022 | 18383 | Feed Lifting Rock Shaft Center |
| 270023 | 18382 | " " Eccentric with 200382C and 201220C |
| 270024 | 18383 | Feed Lifting Rock Shaft with 52267 |
| 270032 | 18378 | Rotary Take-up (small) Driving Shaft Ball Bearing |
| 270032 | 18382 | Rotating Hook Driving Shaft Ball Bearing |
| 270035 | 18382 | Rotating Hook Driving Shaft Gear (internal teeth) with 200382C and 201220C |
| 270036 | 18382 | Rotating Hook Driving Shaft Oil Lead Wire |
| 270038 | 18381 | Rotating Hook Oil Reservoir Cover |
| 270039 | 18381 | " " " " " |
| | | Gasket |

| No. | Plate | Name |
|---------|-------|---|
| 270043 | 18306 | Needle Bar Connecting Link Needle Bearing, for 270054 |
| 270044 | 18382 | Rotating Hook Shaft Thrust Washer, for 270166 |
| 270045 | 18306 | Knee Lifter Lifting Link |
| 270048 | 18381 | " " " Rod Connection |
| 270049 | 18381 | " " Rock Shaft with 200427C and 200434C |
| 270050 | 18306 | Needle Bar with 350445F |
| 270053 | 18306 | " " Connecting Link, for 270054 |
| 270054 | 18306 | " " " " 270053 with 270043 |
| 270055 | 18306 | Needle Bar Connecting Link Guide Block |
| 270057 | 18306 | Needle Bar Connecting Stud with 200086C and 202330 |
| 270058 | 18306 | Needle Bar Oiling Felt |
| 270059 | 18306 | Presser Bar with 176J |
| 270060 | 18306 | " " Bushing |
| 270061 | 18306 | " " Lifter |
| 270062 | 18306 | " " Lifting Releasing Lever Bracket |
| 270063 | 18306 | Presser Bar Position Guide with 200196E and 350411C |
| 270064 | 18381 | Presser Bar Spring |
| 270068 | 18378 | Rotary Take-up (small) Driving Shaft |
| 270069 | 18378 | " " " " Connection Belt |
| 270072 | 18378 | Rotary Take-up (small) Driving Shaft Pulley with two 200382C |
| 270076 | 18306 | Tension Releaser (adjustable) |
| 270077 | 18306 | Thread Guide (on needle bar bushing) |
| 270079 | 18306 | Thread Pull-off |
| 270080 | 18380 | Thread Retainer |
| *270084 | 18371 | Arm Shaft, for 270177 |
| 270086 | 18380 | Tension Releasing Pin, for 270087 |
| 270087 | 18380 | Tension complete, Nos. 13710, 32572, 52082, 52083, 52098, 270086 and two 2102 |
| 270094 | 18381 | Knee Lifter Lifting Rod |
| 270095 | 18306 | Presser Bar Lifting Releasing Lever Bracket Spring |
| 270096 | 18380 | Thread Guide |
| *270099 | 18371 | Needle Bar Crank with 200374C, for 270177 |
| 270100 | 18306 | Needle Bar Connecting Link Thrust Washer |
| 270114 | 18359 | Presser Bar Bushing (for use with Quilter 120485) |
| 270120 | 18360 | Hemmer (foot), for 1/8 in. hem, for hemming shirts |
| 270121 | 18360 | Feed Dog, for 270122 |
| 270122 | 18360 | Throat Plate (small needle hole), for 270121 |
| 270124 | 18306 | Needle Bar Bushing (lower) |
| 270127 | 18345 | Throat Plate (large needle hole), for 127087 |

| No. | Plate | Name |
|--------|-------|---|
| 270128 | 18345 | Throat Plate (large needle hole), for 121446 |
| 270129 | 18345 | Throat Plate (large needle hole), for 44252 and 44253 |
| 270130 | 18345 | Throat Plate (large needle hole), for 26603 |
| 270134 | 18374 | Hemmer Foot, for 5/32 in. hem |
| 270136 | 18374 | " " " 3/16 in. hem |
| 270138 | 18383 | Feed Bar Oiling Wick Holder, for 270139 |
| 270139 | 18383 | " " " " 270138 with 235706 |
| 270143 | 18306 | Needle Bar Connecting Link Hinge Stud with 222598 and 270161 |
| 270144 | 18380 | Face Plate |
| 270147 | 18378 | Rotary Take-up (small) Thread Cast-off Pin, for 270906 |
| 270148 | 18380 | Rotary Take-up Guard |
| 270150 | 18380 | Thread Severing Finger |
| 270151 | 18380 | " " " Guard |
| 270152 | 18375 | Belt Guard with two 200362C, for 270154 |
| 270153 | 18375 | " " Bracket, for 270154 |
| 270154 | 18375 | Belt Guard complete, Nos. 270152, 270153 and two 350328H |
| 270155 | 18382 | Rotating Hook Oil Reservoir Oil Gauge |
| 270156 | 18380 | Thread Severing Finger Guard Hinge Screw Spring Washer |
| 270161 | 18306 | Rotary Take-up (large) Position Pin, for 270143 |
| | | Nos. 270162 to 270164, for 270166 |
| 270162 | 18382 | Rotating Hook Shaft |
| 270163 | 18382 | " " " Bushing |
| 270164 | 18382 | " " " End Bearing |
| 270166 | 18382 | Rotating Hook Shaft Bushing complete, Nos. 268258, 270044, 270162 to 270164, 270176, 350498E and two 201215D |
| 270167 | 18371 | Arm Shaft Connection Belt |
| 270168 | 18371 | " " " " Pulley and Rotary Take-up Driving Pulley with 200363AL, 350492C and three 214206 |
| 270169 | 18382 | Rotating Hook Driving Shaft Connection Belt Pulley with 214206 and two 200070C |
| 270176 | 18382 | Rotating Hook Shaft Oil Filter complete, Nos. 143349 and 202423, for 270166 |
| 270177 | 18371 | Arm Shaft 270084 with 200333C, 200378C, 270005 and 270099 |
| 270187 | 18371 | Balance Wheel (aluminum alloy casting) for "V" Belt (outside diam. of belt groove 2.9 in.) (rim diam. 4 in.) with 201346AL and 350107AL, for 270188 |
| 270188 | 18371 | Balance Wheel 270187 with 270004 |

| No. | Plate | Name |
|---------|-------|---|
| 270189 | 18371 | Balance Wheel (aluminum alloy casting) for 5/16" round belt (diam. of belt groove 1-13/16 in.) (rim diam. 4 in.) with 201346AL and 350107AL, for 270190 |
| 270190 | 18371 | Balance Wheel 270189 with 270004 |
| 270195 | 18372 | Presser Foot, for gathering |
| 270196 | 18372 | " " " Slide Fasteners |
| 270261 | 18306 | Needle Bar Bushing (upper) |
| 270285 | 18381 | Knee Lifter Lifting Link Connection |
| 270643 | 18373 | Presser Foot Shank, for 259782 |
| 270653 | 18383 | Feed Driving Connection Crank Needle Bearing, for 270806 |
| 270653 | 18383 | Stitch Regulating Shaft Crank Needle Bearing, for 270823 |
| *270801 | ----- | Arm |
| *270802 | ----- | Bed |
| 270803 | 18383 | Feed Driving Connection, for 270804 |
| 270804 | 18383 | " " " 270803 with 270016 |
| 270805 | 18383 | Feed Driving Connection Crank with 200040E, for 270806 |
| 270806 | 18383 | Feed Driving Connection Crank 270805 with 270653 |
| 270807 | 18383 | Feed Driving Connection Link |
| 270808 | 18383 | " " " " Hinge Pin |
| 270809 | 18382 | " " Eccentric with 200382C and 201220C |
| 270813 | 18382 | Rotating Hook Driving Shaft |
| 270815 | 18383 | Stitch Regulating Adjusting Screw Washer (leather) |
| 270816 | 18383 | Stitch Regulating Index Plate, for 270829 |
| 270817 | 18383 | Stitch Regulating Lever |
| 270818 | 18383 | " " " Connection |
| 270819 | 18383 | " " " Stop Block with 204020, for 270829 |
| 270820 | 18383 | Stitch Regulating Shaft |
| 270821 | 18383 | " " " Bushing (split) |
| 270822 | 18383 | Stitch Regulating Shaft Crank with 200040E, for 270823 |
| 270823 | 18383 | Stitch Regulating Shaft Crank 270822 with two 270653 |
| 270824 | 18383 | Stitch Regulating Shaft Crank Link with two 200394C |
| 270825 | 18383 | Stitch Regulating Shaft Crank Hinge Stud |
| 270826 | 18380 | Rotary Take-up (large) |
| 270827 | 18383 | Feed Lifting Connection, for 270828 |
| 270828 | 18383 | " " " 270827 with 270016 |
| 270829 | 18383 | Stitch Regulating Index Plate 270816 with two each 200996C and 270819 |
| 270868 | 18379 | Rotating Hook with 143301 and two 1253AL, for 270869 |

| No. | Plate | Name |
|----------|-------|--|
| 270869 | 18379 | Rotating Hook 270868 with 270874 and four 1053E, for 270870 |
| 270870 | 18379 | Rotating Hook 270869 with 270872, 270876 and three 1367E, for 270871 |
| 270871 | 18379 | Rotating Hook 270870 with 52237 |
| 270872 | 18379 | " " Bobbin Case Holder (chromium plated), for 270870 and 270873 |
| 270873 | 18379 | Rotating Hook Bobbin Case 52237 with 270872 |
| 270874 | 18379 | Rotating Hook Thread Guard, for 270869 |
| 270876 | 18379 | " " Section, for 270870 |
| 270906 | 18378 | Rotary Take-up (small) with 270147 and 350418C |
| 271032 | 18380 | Rotary Take-up (large) Thread Guide |
| 271062 | 18382 | Rotating Hook Driving Shaft Bushing with 222598 |
| 350107AL | 18371 | Balance Wheel Position Screw, for 259463, 259465, 270187 and 270189 |
| 350231C | 18311 | Knee Lifter Rock Lever Extension Set Screw, for 228359 |
| 350231C | 18311 | Knee Lifter Rock Lever Knee Plate Arm Set Screw, for 228359 |
| 350231C | 18311 | Knee Lifter Rock Lever Knee Plate Set Screw, for 228364 |
| 350277C | 18383 | Feed Driving Rock Shaft Center Set Screw |
| 350277C | 18383 | Feed Lifting Rock Shaft Center Set Screw |
| 350277C | 18382 | Rotating Hook Shaft Bushing Set Screw |
| 350328H | 18375 | Belt Guard Bracket Screw, for 270154 |
| 350390E | 18381 | Arm Screw (long) |
| 350411C | 18306 | Presser Bar Position Guide Pinch Screw, for 270063 |
| 350418C | 18378 | Rotary Take-up (small) Set Screw, for 270906 |
| 350435C | 18381 | Presser Bar Spring Screw (pressure regulating) |
| 350442C | 18306 | Presser Bar Lifter Hinge Screw |
| 350445F | 18306 | Needle Set Screw, for 270050 |
| 350472H | 18343 | Tucker Space Guide Base Hinge Screw, for 259529 |
| 350486XC | 18380 | Thread Severing Finger Guard Hinge Screw |
| 350489AL | 18306 | Needle Bar Bushing (upper) Set Screw |
| 350492C | 18371 | Arm Shaft Connection Belt Pulley Position Screw, for 270168 |
| 350498E | 18382 | Rotating Hook Shaft Oil Regulating Screw, for 270166 |
| 350499XC | 18381 | Presser Bar Spring Screw Stud |
| 350503H | 18380 | Face Plate Screw |
| 350503H | 18380 | Rotary Take-up Guard Screw |
| 350503H | 18380 | Thread Guide Screw |
| 350507C | 18383 | Feed Driving Connection Crank Hinge Screw |
| 350508X | 18383 | Stitch Regulating Adjusting Thumb Screw |


NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|---------|-------|---|
| 350509C | 18383 | Stitch Regulating Lever Connection Hinge Screw |
| 350511D | 18373 | Binder Bracket Thumb Screw, for 259784 |

Genuine SINGER Needles should be
used in SINGER Machines.
These Needles and their Containers
are marked with the
Company's Trade-Mark "SIMANCO." 1

Needles in Containers marked
"FOR SINGER MACHINES"
are NOT **SINGER** made needles. 2

ILLUSTRATIONS
OF
PARTS

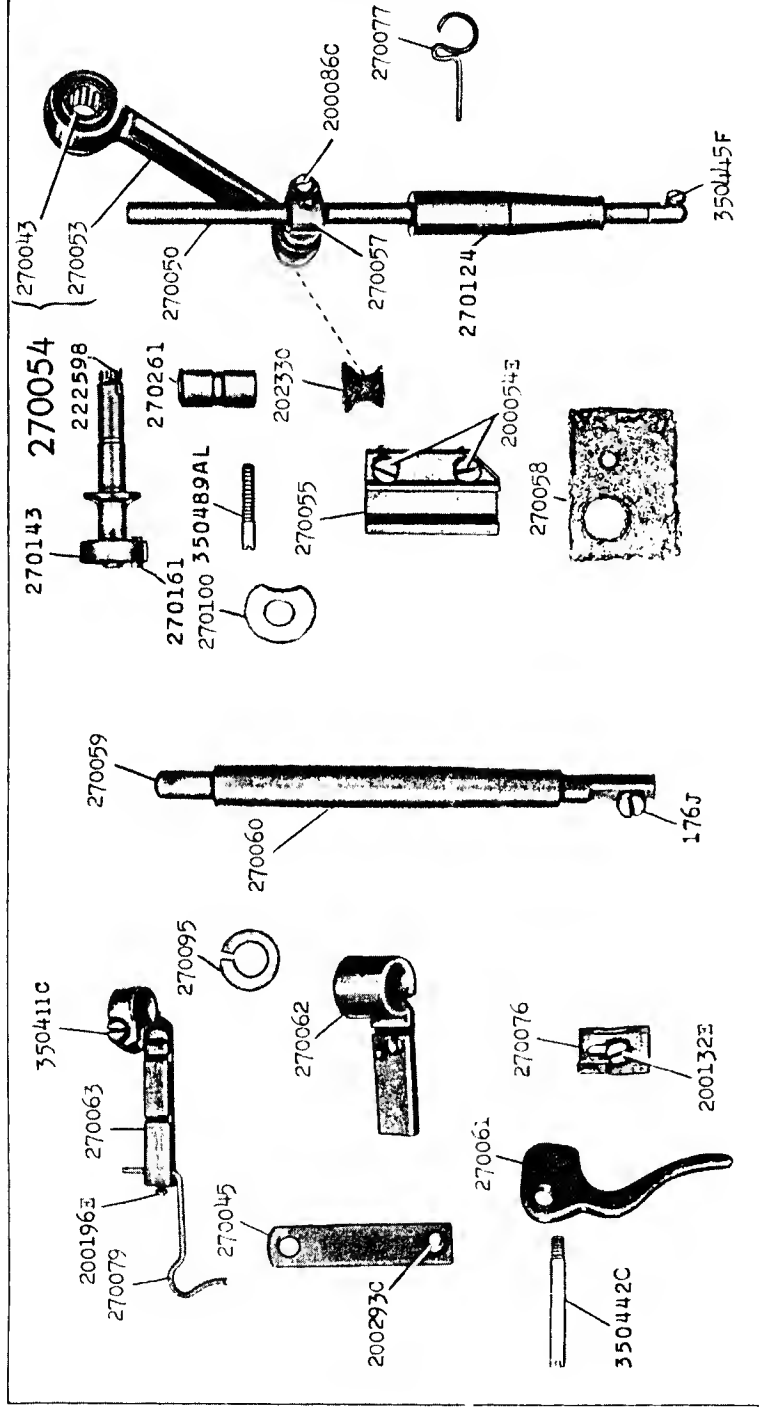

18310 - 1/2

250522




259477




411400




120342

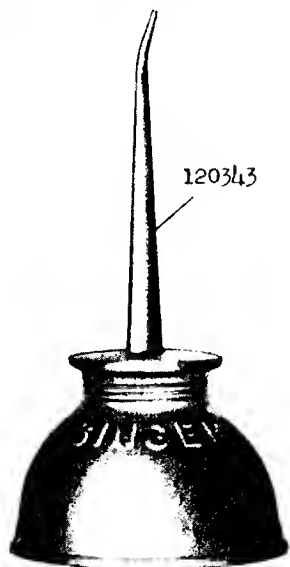

25878

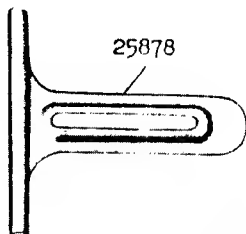


12361

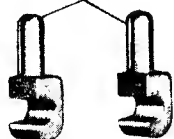


18311 - 1/4


228372

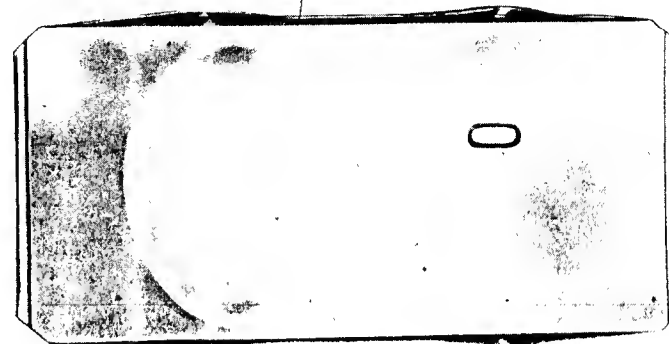


228371

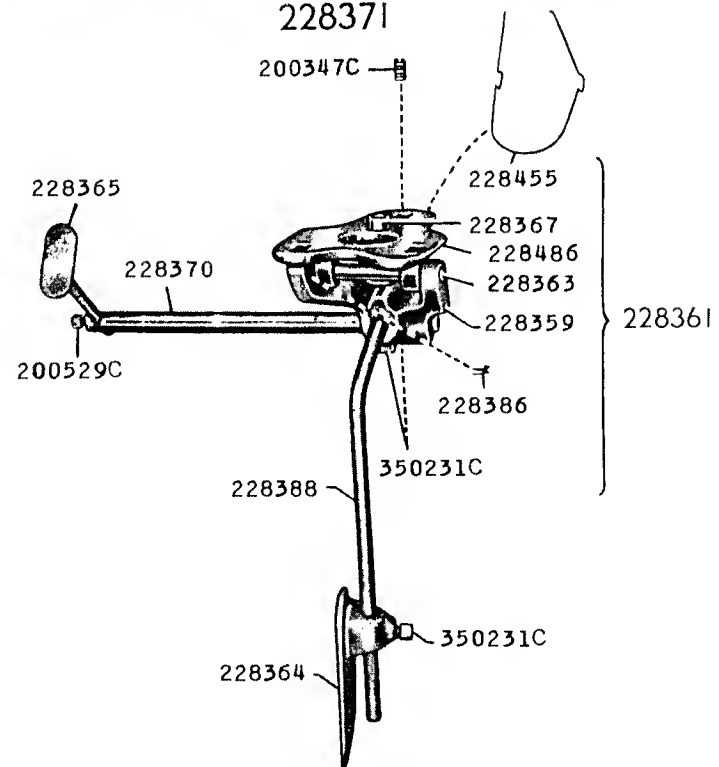


18312 - 3/8

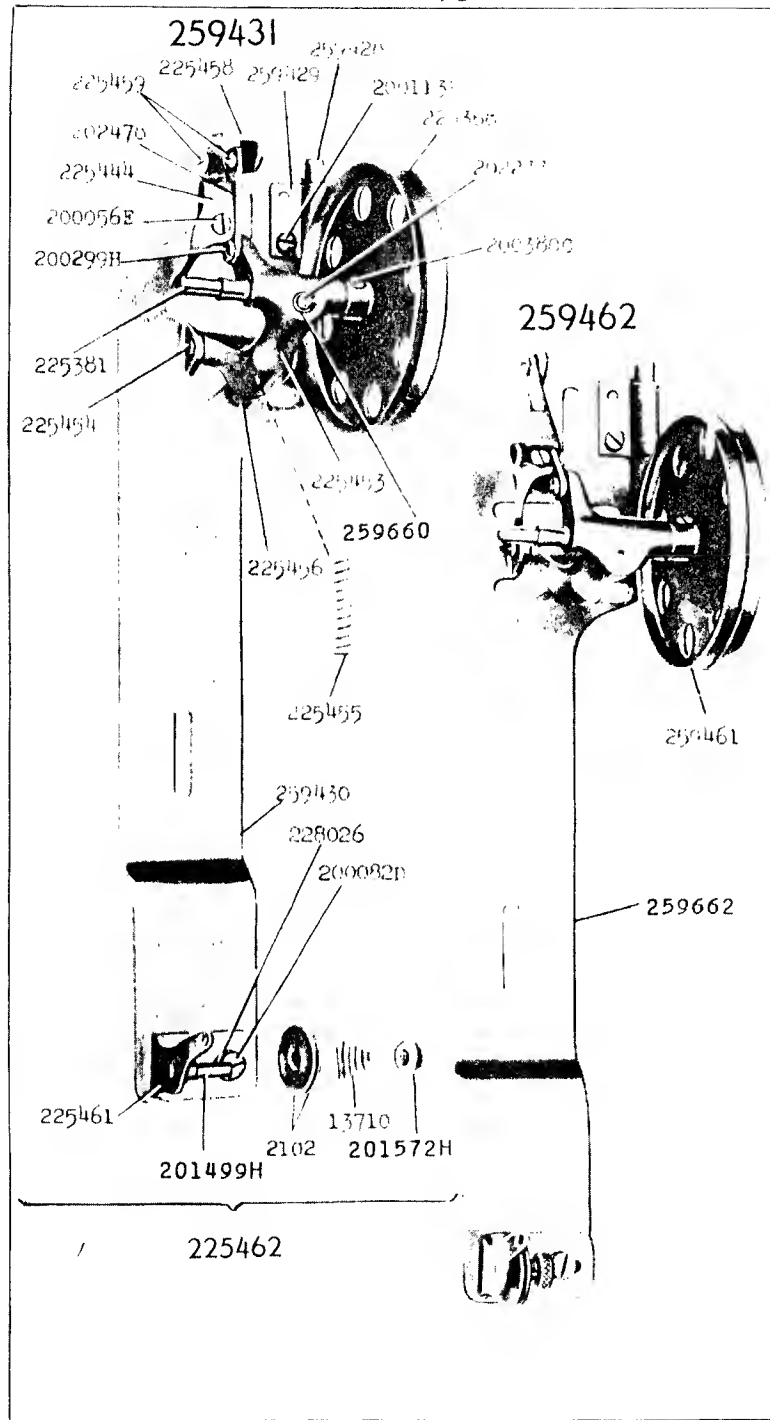


18313 - 1/3

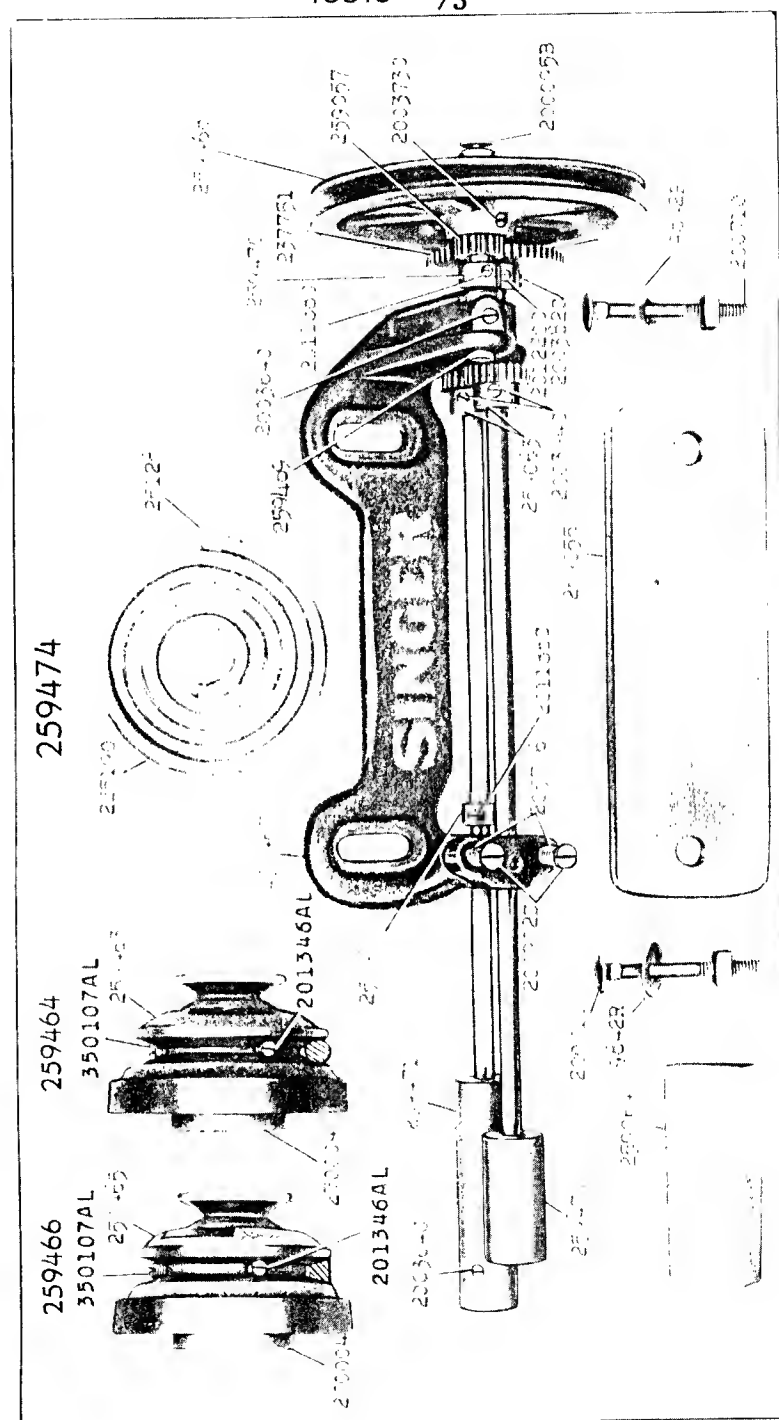


18315 - 2/3

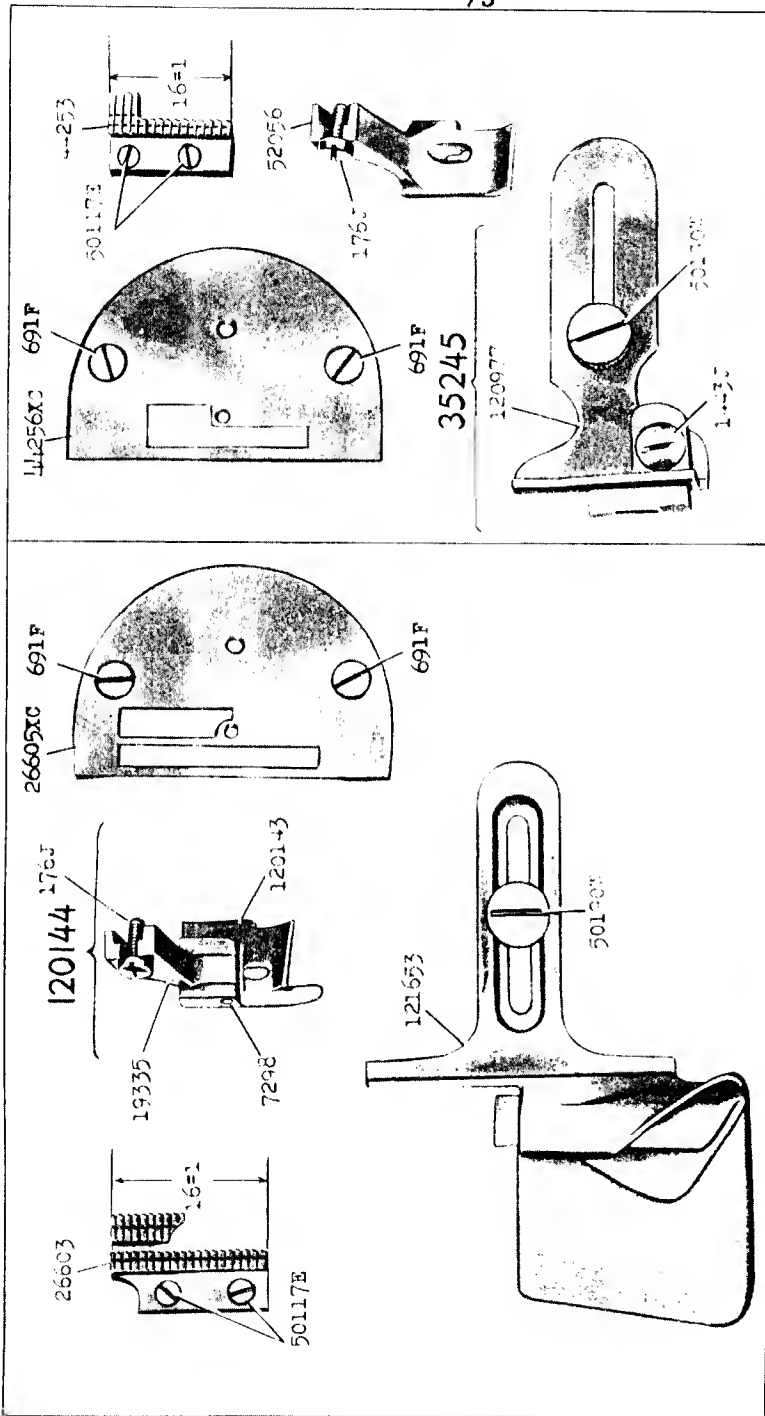


18316 - 2/3

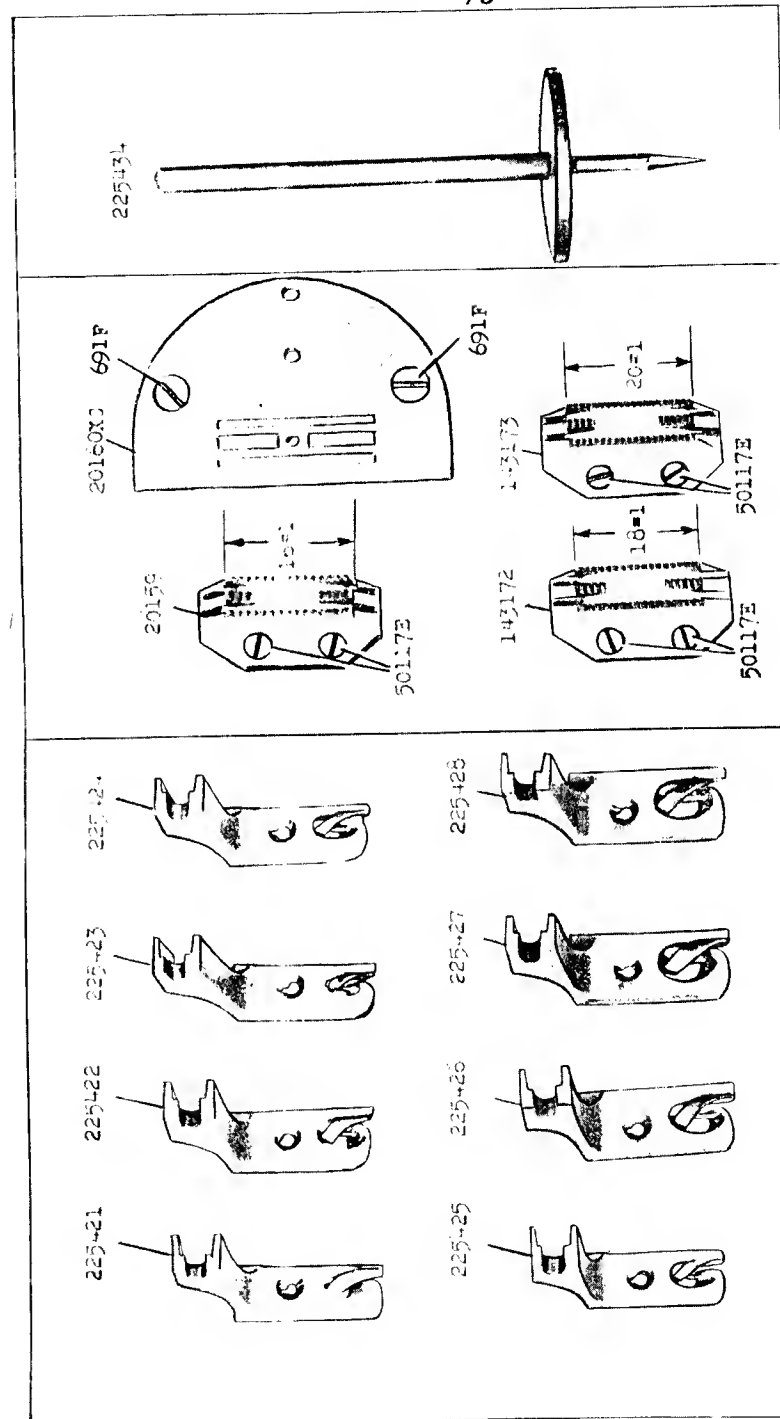

18347

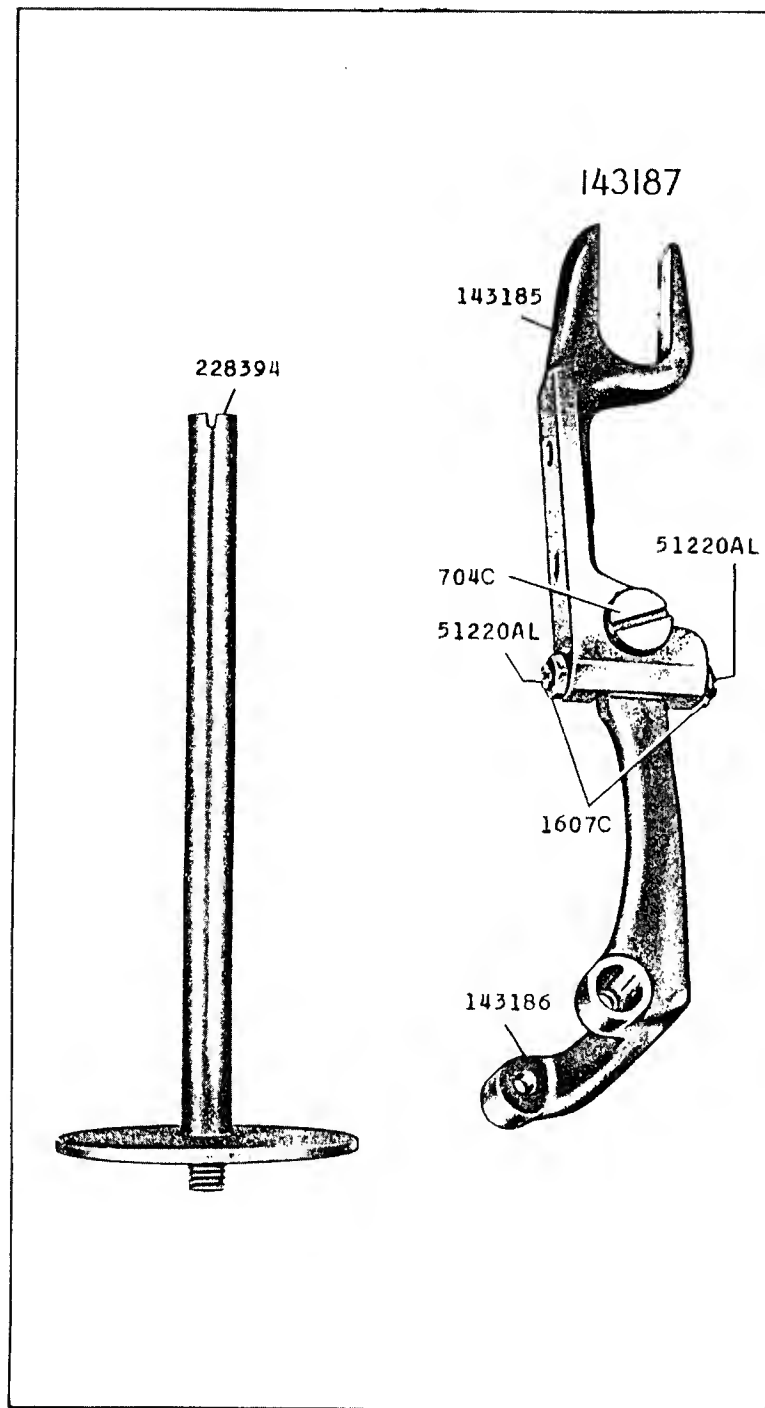


18359 - 1/2

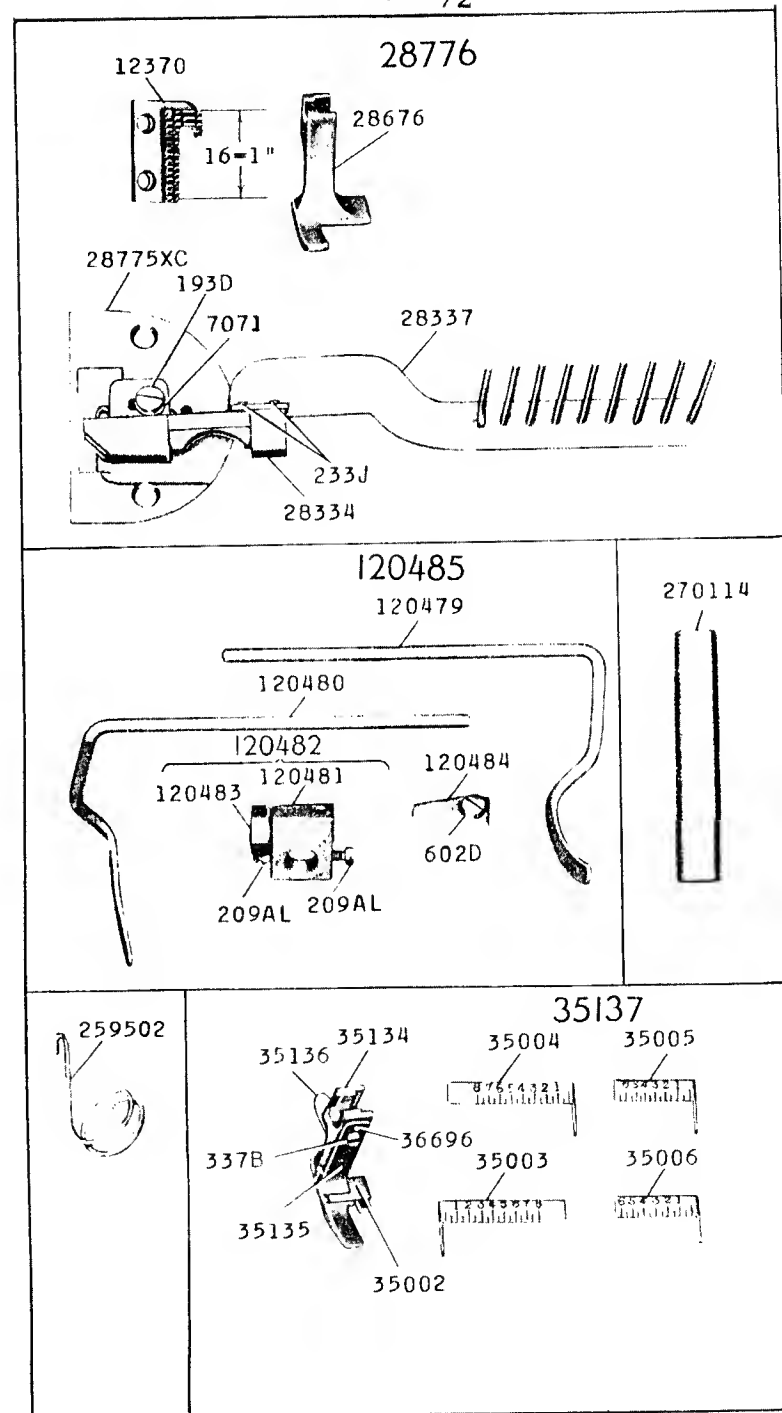

18360 - 2/3


142059

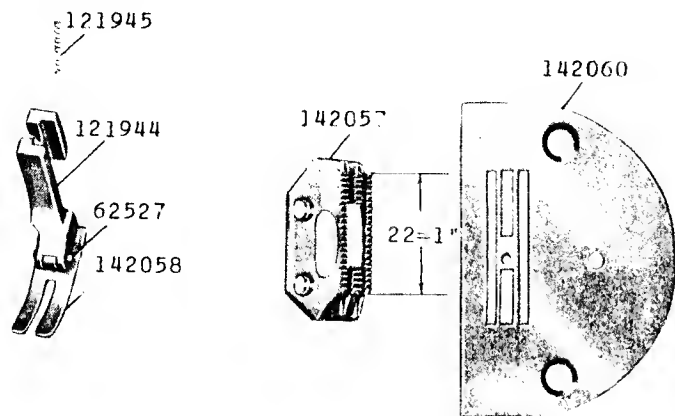


270120




270121

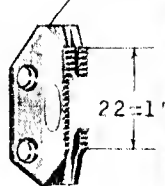


270122

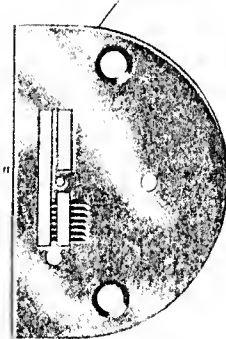


26682

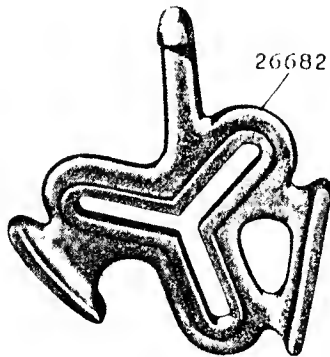


18361 - 1/4


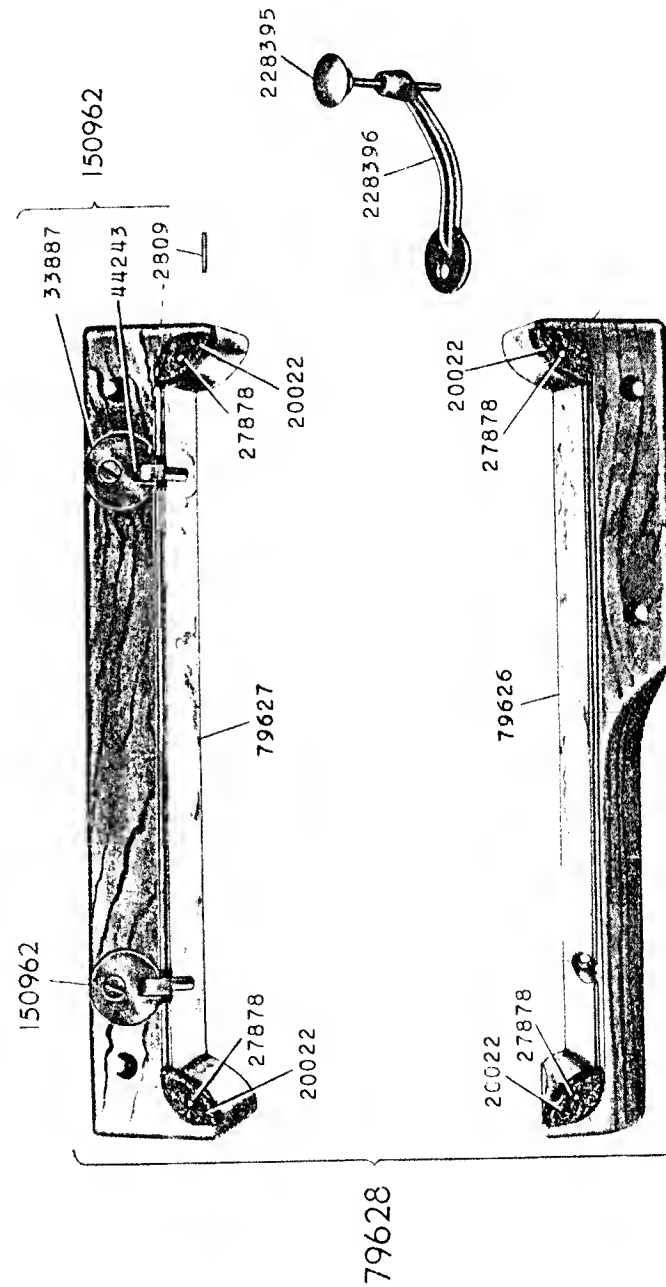


18362 - 1/6

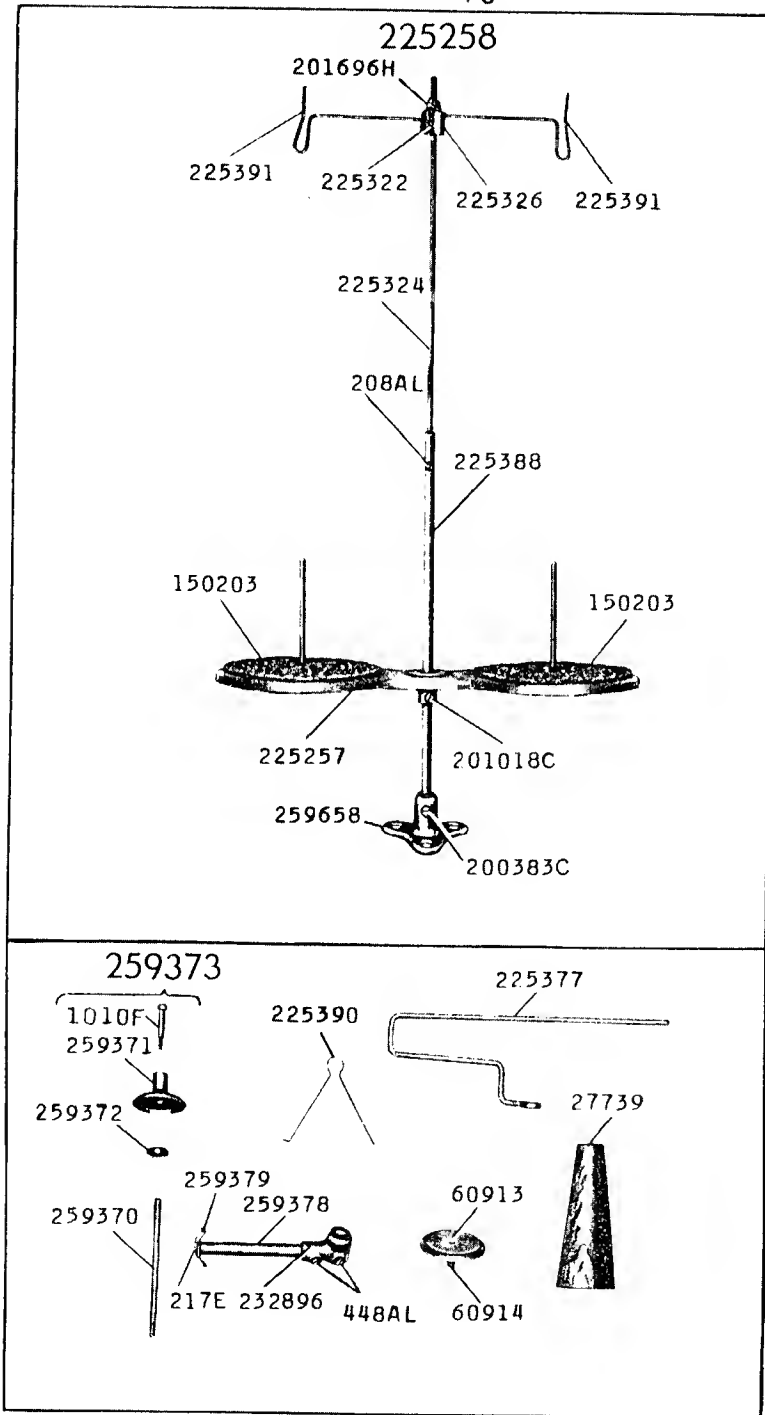


18364

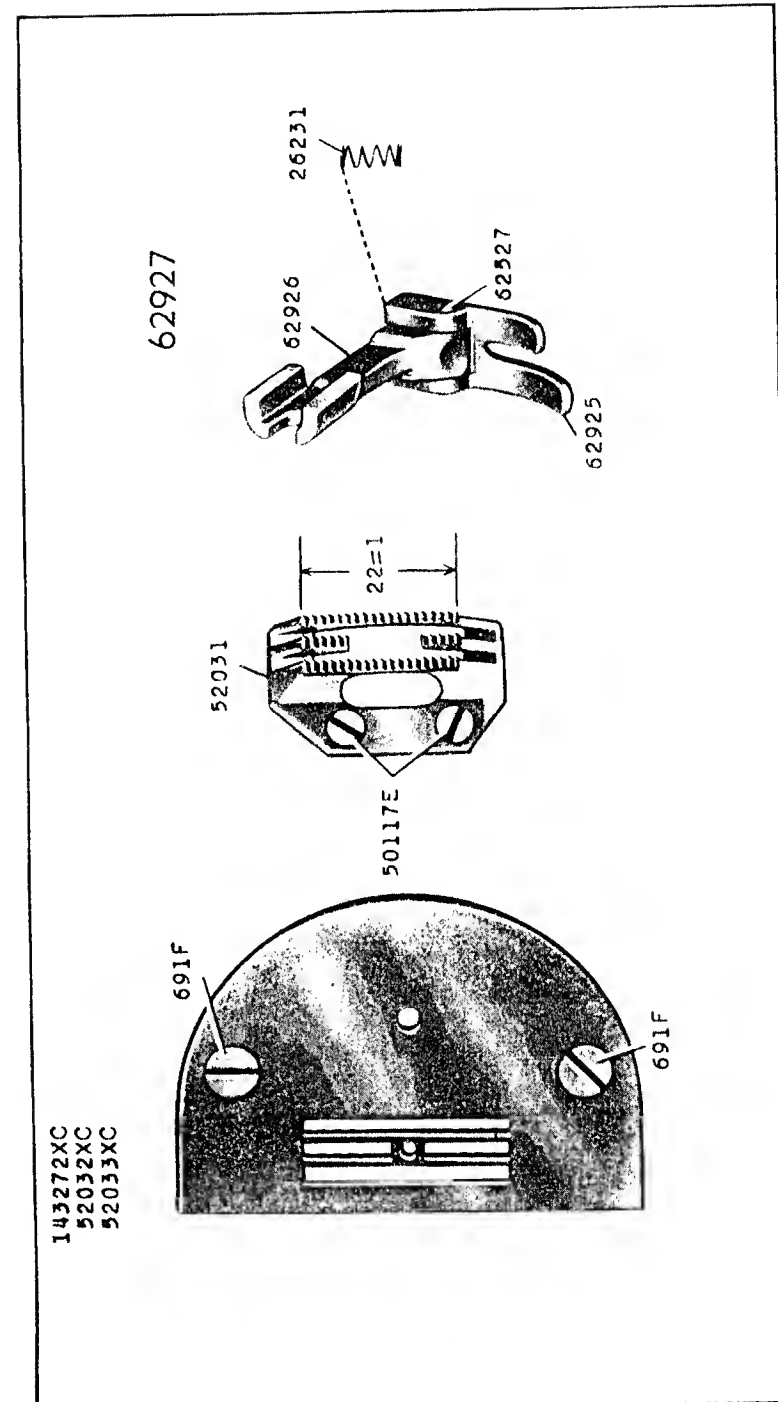

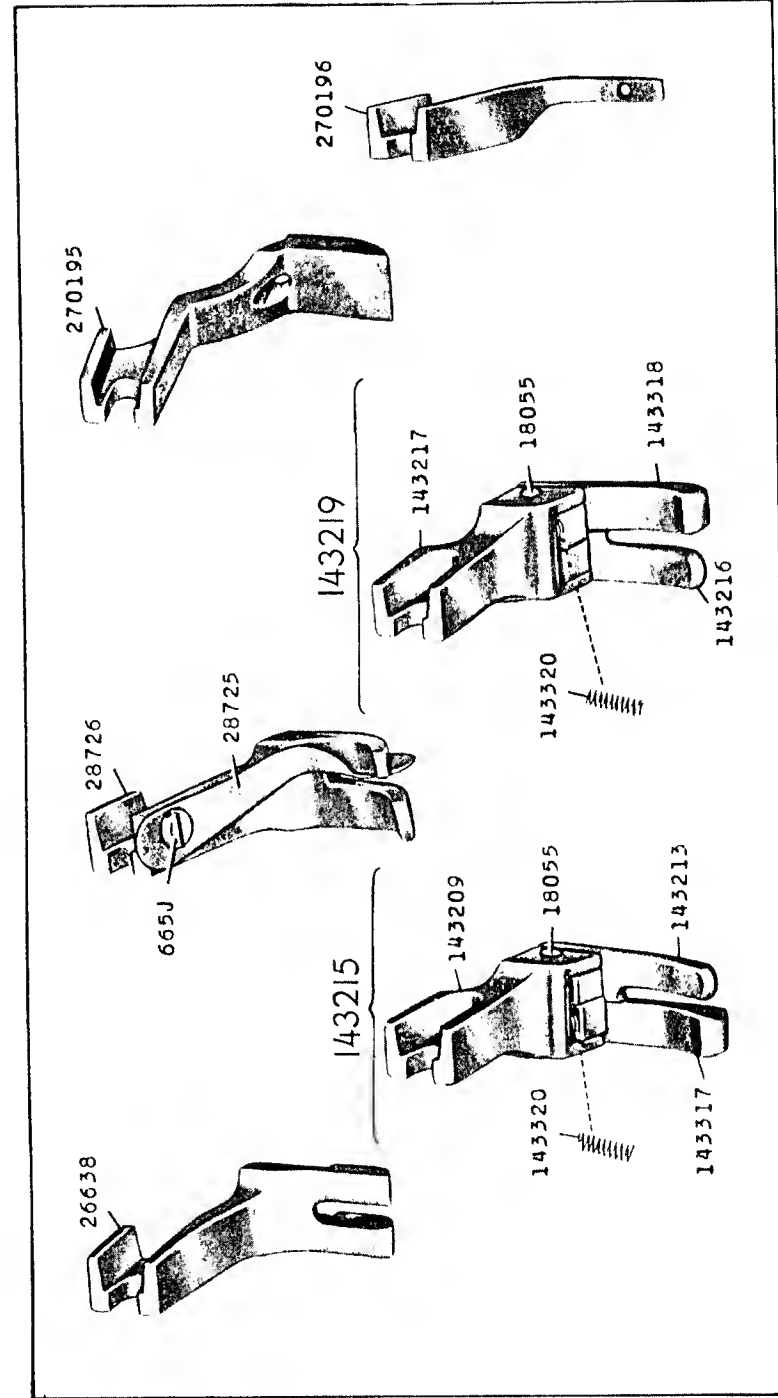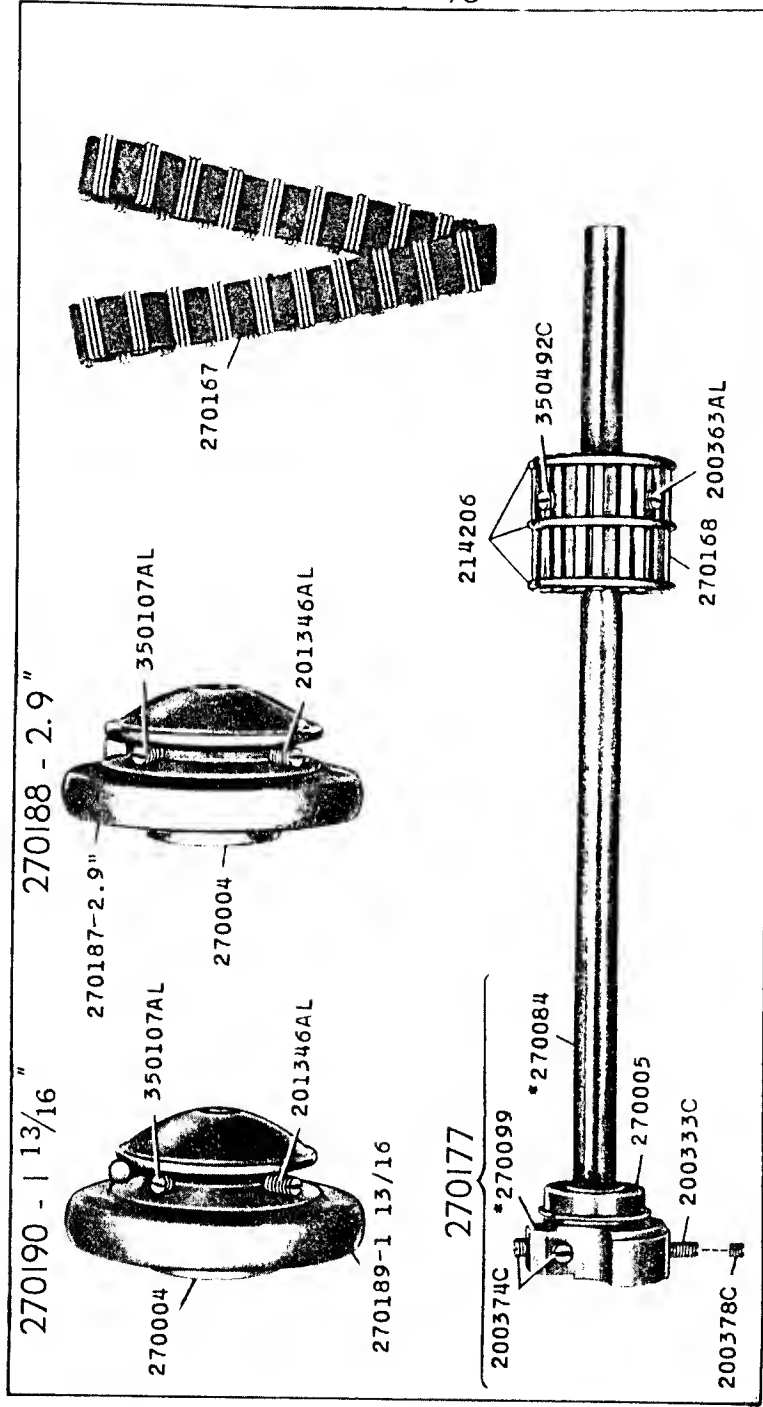


259784

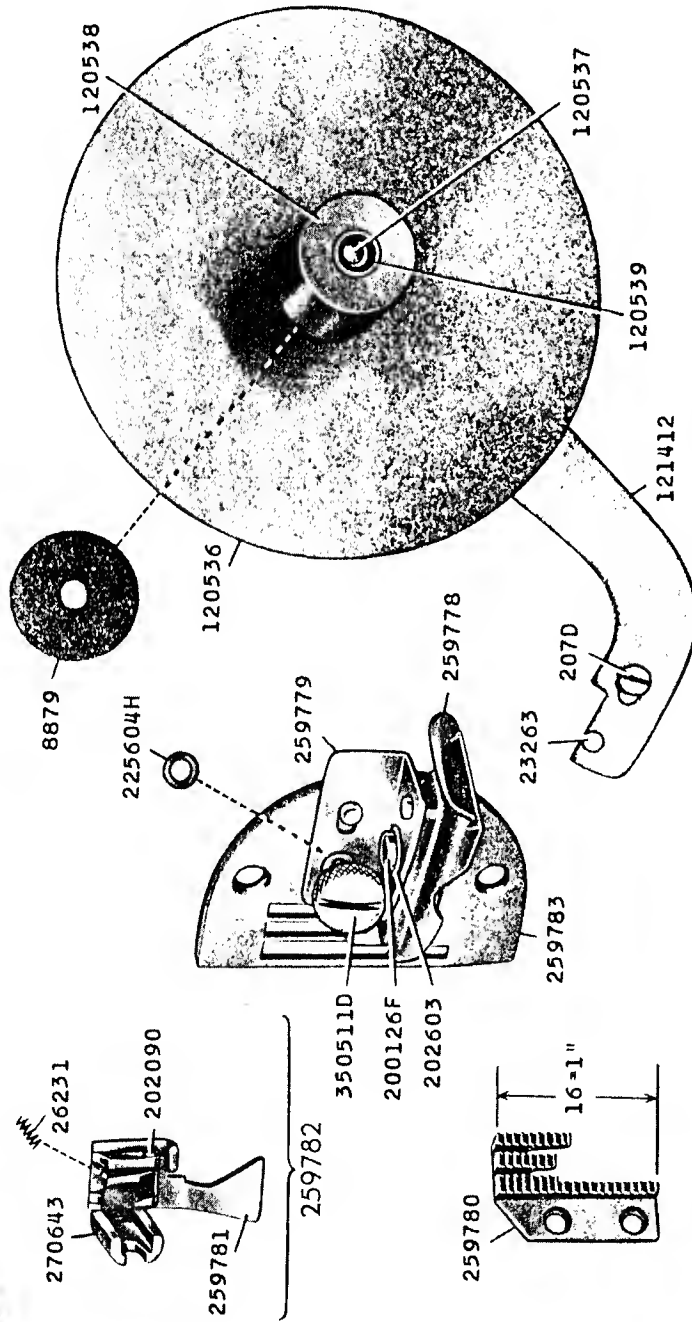



142059

270120-1/8" 270134-5/32" 270136-3/16"

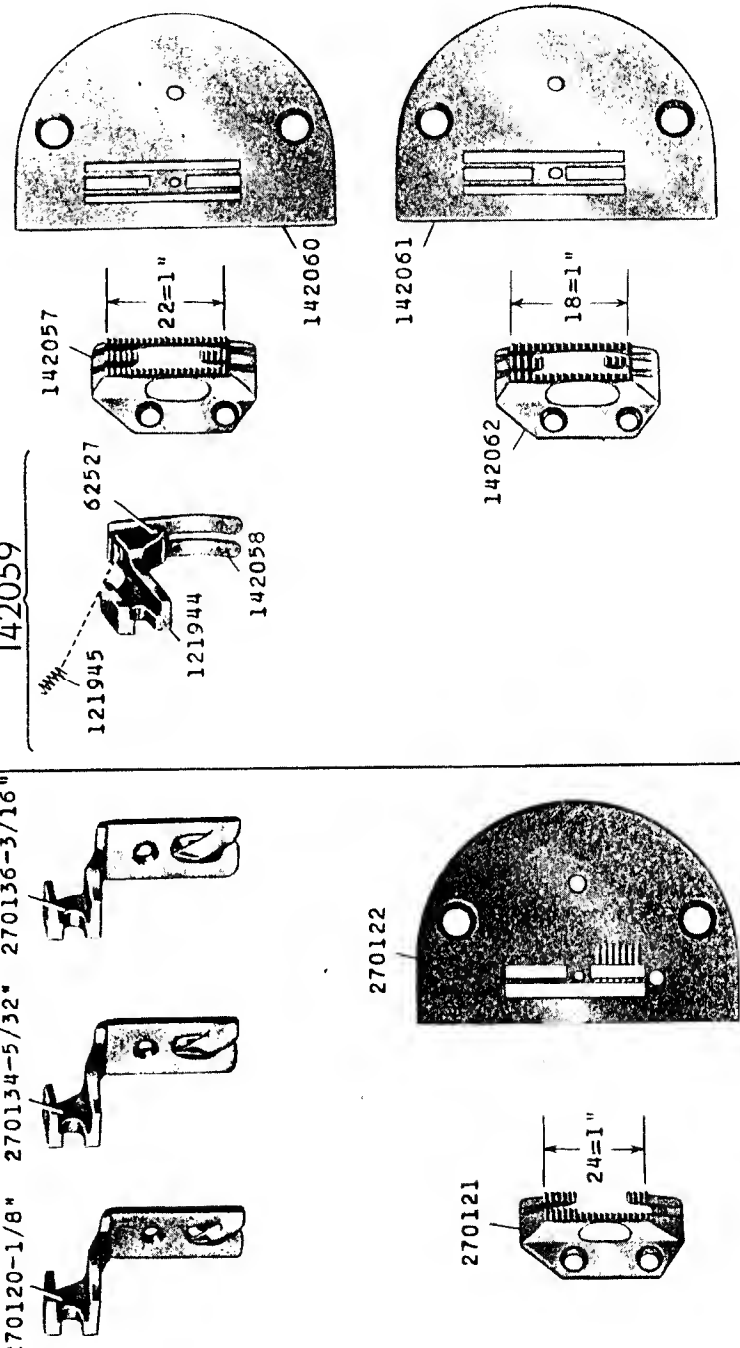


18375 - 2/3


270154

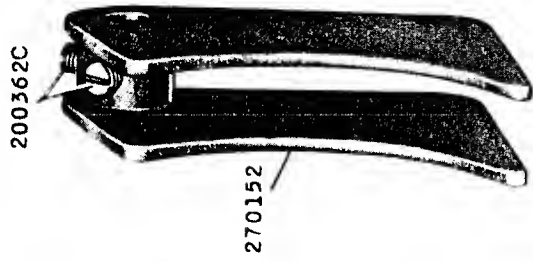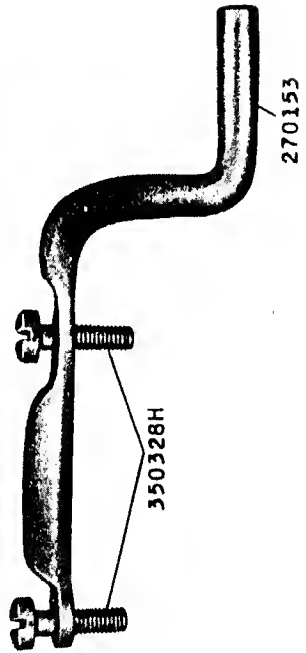

18378 - 1/2

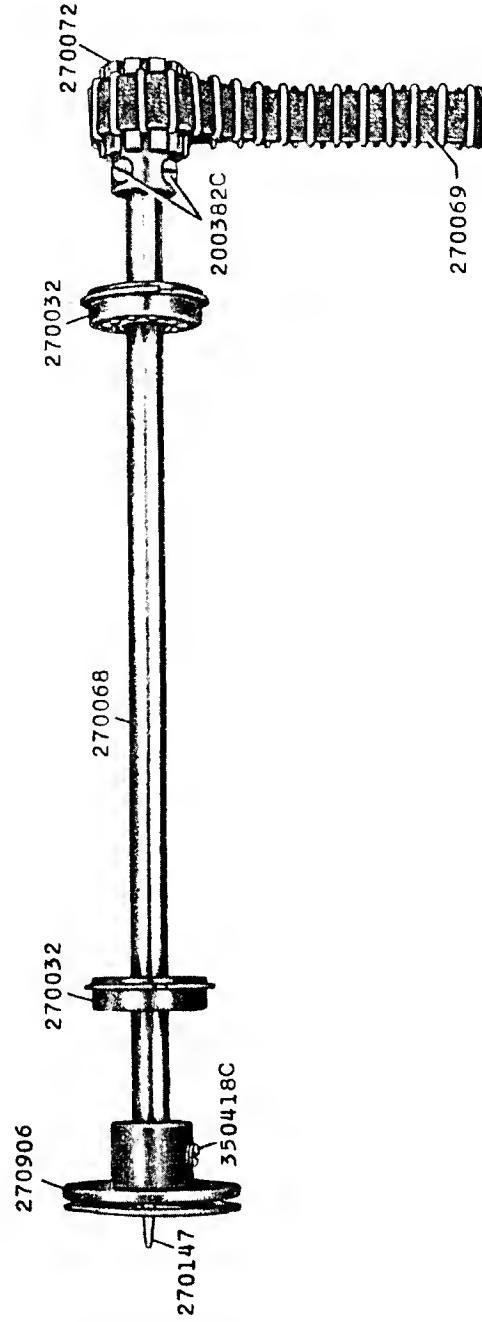

18379 - 3/4

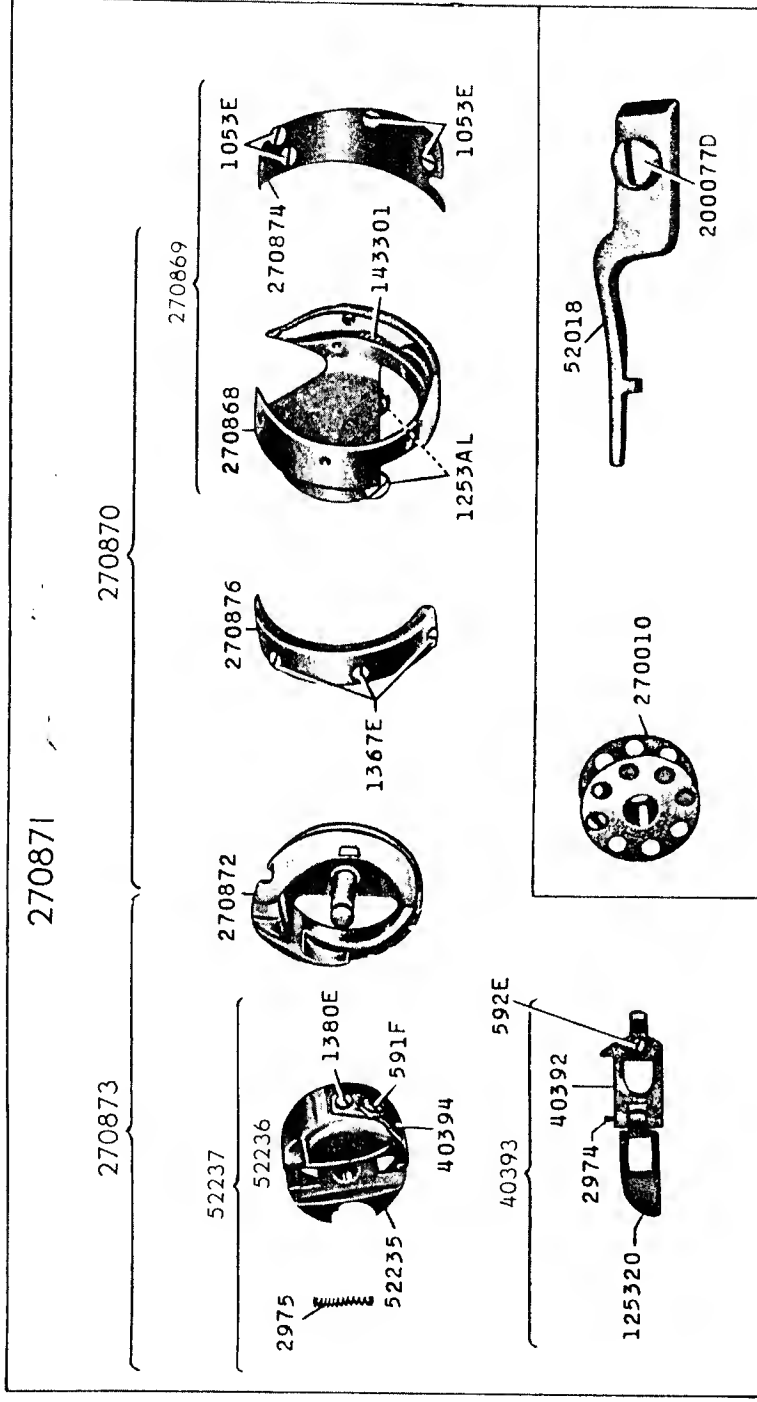

18380 - 1/2

